D-Link[®]



User Manual

Wireless N 360° Home Network Camera

DCS-6010L

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes. Information in this document may become obsolete as our services and websites develop and change. Please refer to the www.mydlink.com website for the most current information.

Manual Revisions

Revision	Date	Description
1.00	October 23, 2012	DCS-6010L Revision A1 with firmware version 1.00
1.01	June 6, 2013	DCS-6010L Revision A1 with firmware version 1.01

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2013 D-Link Corporation.


All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation.

Table of Contents

Product Overview	4
Package Contents	4
Introduction	5
System Requirements	5
Features	6
Hardware Overview	7
Outside	7
Internal Ports	8
Installation	9
Wireless Installation Considerations	9
Installation Zero Configuration Setup	10
Camera Installation Wizard	14
Mac Users	15
Manual Hardware Installation	16
Focusing the Camera	17
Mounting the Camera	18
WPS - Push Button Setup	19
mydlink	20
Configuration	21
Using the Configuration Interface	21
Live Video	22
Setup	24
Setup Wizard	24
Network Setup	30
Wireless Setup	33
Dynamic DNS	34

Image Setup	35
Audio and Video	37
Preset	
Motion Detection	41
Time and Date	42
Event Setup	43
SD Card	51
Advanced	52
HTTPS	52
Access List	53
Maintenance	54
Device Management	54
System	55
Firmware Upgrade	56
Status	57
Device Info	57
Logs	58
Help	59
Technical Specifications	60

Product Overview Package Contents

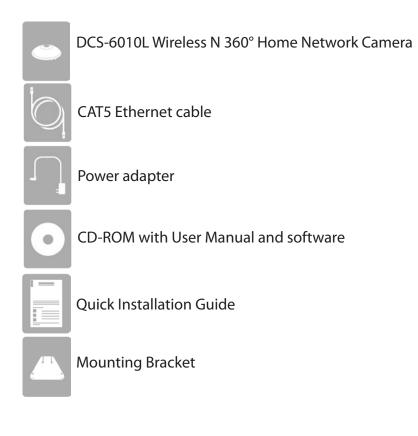

If any of the above items are missing, please contact your reseller.

Note: Using a power supply with a different voltage than the one included with your product will cause damage and void the warranty for this product.



Introduction

Congratulations on your purchase of the DCS-6010L Wireless N 360° Home Network Camera. The DCS-6010L is a versatile and unique solution for your small office or home. Unlike a standard webcam, the DCS-6010L is a complete system with a built-in CPU and web server that transmits high quality video images for security and surveillance. The DCS-6010L can be accessed remotely, and controlled from any PC/Notebook over your local network or through the Internet via a web browser. The simple installation and intuitive web-based interface offers easy integration with your Ethernet/Fast Ethernet or 802.11n/g wireless network. The DCS-6010L also comes with remote monitoring and motion detection features for a complete and cost-effective home security solution.

System Requirements

- Computer with Microsoft Windows® 7/8/Vista/XP, or Mac with OS X 10.6 or higher
- PC with 1.3GHz or above; at least 128MB RAM
- Internet Explorer 7, Firefox 12, Safari 4, or Chrome 20 or higher version with Java installed and enabled
- Existing 10/100 Ethernet-based network or 802.11n wireless network
- A MicroSD memory card (optional) is required for recording to onboard storage. SDHC Class 6 or above is recommended.
- Broadband Internet connection

Features

360 Degree Surveillance

The built-in fisheye lens gives you a full 360 degrees of coverage, allowing it to monitor an entire room with ease. It can also be placed on a wall for 180 degree coverage of a hallway. Distortion correction gives you a panoramic view or a normal corrected image that you can pan across easily.

Simple to Use

The DCS-6010L is a stand-alone system with a built-in CPU, requiring no special hardware or software. The DCS-6010L supports both ActiveX mode for Internet Explorer and Java mode for other browsers such as Firefox[®] and Safari[®].

Supports a Variety of Platforms

Supporting TCP/IP networking, HTTP, and other Internet related protocols. The DCS-6010L can also be integrated easily into other Internet/Intranet applications because of its standards-based features.

802.11n Wireless or Ethernet/Fast Ethernet Support

The DCS-6010L offers wireless 802.11n and Ethernet/Fast Ethernet connectivity, making the DCS-6010L easy to integrate into your existing network environment. The DCS-6010L works with a 10Mbps Ethernet based network or 100Mbps Fast Ethernet based network for traditional wired environments, and works with 802.11n routers or access points for added flexibility. The Site Survey feature also allows you to view and connect to any available wireless networks.

Web Configuration

Using a standard Web browser, administrators can configure and manage the Network Camera directly from its own Web page via Intranet or Internet. This means you can access your DCS-6010L anytime, anywhere in the world.

Broad Range of Applications

With today's high-speed Internet services, the Network Camera can provide the ideal solution for delivering live video images over the Intranet and Internet for remote monitoring. The Network Camera allows remote access using a Web browser for live image viewing, and allows the administrator to manage and control the Network Camera anytime, anywhere in the world. Many applications exist, including industrial and public monitoring of homes, offices, banks, hospitals, child-care centers, and amusement parks.

Remote Monitoring Utility

The D-ViewCam application adds enhanced features and functionality for the Network Camera and allows administrators to configure and access the Network Camera from a remote site via Intranet or Internet. Other features include image monitoring, recording images to a hard drive, viewing up to 32 cameras on one screen, and taking snapshots.

Hardware Overview

Outside



1	Camera Lens	Records video of the surrounding area
2	Camera Cover	Rotate the cover counter-clockwise to remove it and access the Ethernet port and power connecterCaution: When removing the cover, remove it slowly to avoid disconnecting the microphone.
3	Microphone	Records audio from the surrounding area
4	MicroSD Card Slot	Insert a MicroSD card for Local storage for storing recorded image and video
5	WPS Status LED	Indicates the WPS connection status of the camera Indicates the camera's current status
6	Status LED	Indicates the camera's current power and connectivity status.
7	WPS Button	Press this button, then press the WPS button for 5 seconds on your router to set up a wireless connection automatically
8	Reset Button	Press and hold this button for 10 seconds to reset the camera

Internal Ports



You can access the inside of the DCS-6010L by rotating the camera cover counter-clockwise, then lifting it off of the camera.

1	Power Receptor	Power receptor for the provided power cable or PoE cable to connect to your network
2	Ethernet Port	Connects to an RJ45 Ethernet
3	Cable Channel	Channel for Ethernet and Power cables
4	Cable Channel Guide	Guide to assist correct casing alignment with the cable channel.

Caution: When re-attaching the cover, ensure that the cables are seated in the cable channel.

Installation Wireless Installation Considerations

This D-Link device can connect to your wireless network from anywhere within the operating range of your wireless network. However, the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

- 1. Minimize the number of walls and ceilings between your adapter and other network devices (such as your Network Camera) each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters).
- 2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle, it looks over 42 feet (14 meters) thick. Position your devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
- 3. Building Materials make a difference. A solid metal door or aluminum studs may weaken the wireless signal. Try to position your access points, wireless routers, and other networking devices where the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
- 4. Keep your product at least 3-6 feet or 1-2 meters away from electrical devices or appliances that generate RF noise.
- 5. If you are using 2.4GHz cordless phones or other radio frequency sources (such as microwave ovens), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone in not in use.

Note: The DCS-6010L has a metal underside and mounting bracket.

The metal underside and mounting bracket will affect directional WiFi signal strength adversely if not positioned correctly

Installation Zero Configuration Setup

If you have a mydlink-enabled Cloud Router, you can take advantage of Zero Configuration. Zero Configuration automatically configures your camera's settings for you, and adds it to your mydlink account automatically. This type of setup allows you to set up your camera by simply plugging it in and connecting it to your router.

Connect your camera to your mydlink-enabled Cloud Router and Zero Configuration will automatically configure your DCS-6010L and automatically add the camera to your mydlink account. After the short time it takes to do this you can remotely access your camera from the www.mydlink.com website to manage and monitor your DCS-6010L.

Connect the Ethernet Cable

Using the provided Ethernet cable connect one end to your camera and the other-end to your network.


To install the provided Ethernet cable see "Internal Ports" on page 8 for detailed instructions.


Attach the External Power Supply

Attach the external power supply to the power receptor and to your wall outlet or power strip.

To install the provided power supply see "Internal Ports" on page 8 for detailed instructions.

1	Ethernet Cable	Use an RJ45 Ethernet cable or PoE cable to connect to your network
2	Power Cable	Power cable for the provided power adapter

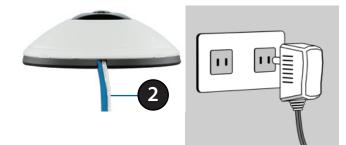

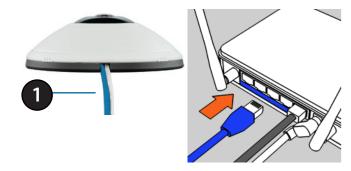

Optional: WPS Wireless Connection

Alternatively, if your router supports WPS, you can use the WPS button on the camera to easily create a secure wireless connection to your network.

To create a WPS connection:

Step 1

Press and hold the WPS button for approximately 5-6 seconds. The WPS LED will blink.

Step 2

Within 60 seconds press the WPS button on your router. On some routers, you may need to log in to the web interface and click on an on-screen button to activate the WPS feature. If you are not sure where the WPS button is on your router, please refer to your router's User Manual.

The DCS-6010L will automatically create a wireless connection to your router. While connecting, the status LED will flash. When the connection process is complete, the status LED will turn solid.

You can now remove the Ethernet cable by removing the camera cover and disconnecting the Ethernet cable. See "Internal Ports" on page 8 for more details.

Note: If your router does not support WPS, you can still use the wired connection method on the previous page. After Zero Configuration setup is complete, your router's wireless settings will be automatically transferred to the camera.



Check Your mydlink Account

From any computer, open a web browser, go to http://www.mydlink.com and log into your account. Once mydlink detects your camera, a **New Device Found!** notice will appear in the bottom-left corner. Click on the device name to continue.

mydlink My Devices Shared Devices My Services My Profile DIR-6051 Router Status Settings 20019862 -DIR-605 192,168,1,103 I AN ID 192 168 0 1 🚯 0000. Зка Connected Devi 0008.4k8 C Device Name IP Address MAC Address Block Device 00 26 20 02 FE FA CardboardBo 192,168.0.110 밑. 192.168.0.120 04:54:53:50:53:18 192.168.0.100 00:1A-92:E2:40:C9 192.168.0.121 28:E0:20:D0:0A:BE Q, 192 168 0 101 F0 A2 25 AA 8C C3 Suspect List MAC Address Device Name Time Block Device DC 5-6010

A summary and confirmation notification will appear with the automatically configured details. Make a note of the details and click **OK** to add the camera to your account.

Confirming New Device

Do you want to add this new device to your mydlink account?

Device Name: DCS-6010L mydlink Number: 44441252 Network name (SSID): ddddddd Admin Password: oic953XZ


You can change these default settings by going to **Advanced Settings** after add it to your device list.



Zero Configuration is now complete and your camera has been added to your mydlink account. You can now view your camera on the mydlink Live View tab.

If you wish to connect your camera to your router wirelessly, you can simply disconnect the Ethernet cable and move the camera to its intended location; your router's wireless settings have been automatically transferred to the camera, and no further configuration is required.


Your camera is now set up, and you can skip to "mydlink" on page 20 to learn more about the mydlink features of this camera, or to "Configuration" on page 21 for advanced configuration of your camera.

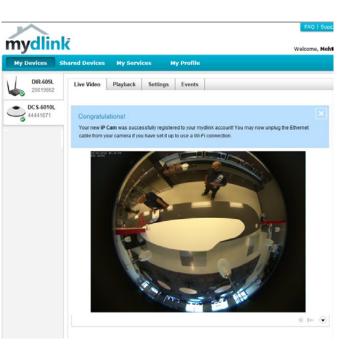

Camera Installation Wizard Windows Users

Insert the Installation CD-ROM into your computer's optical drive to start the autorun program.

Simply click Set up your Cloud Camera to go through the Setup Wizard, which will guide you step-by-step through the installation process from connecting your hardware to configuring your camera and registering it with your mydlink account.

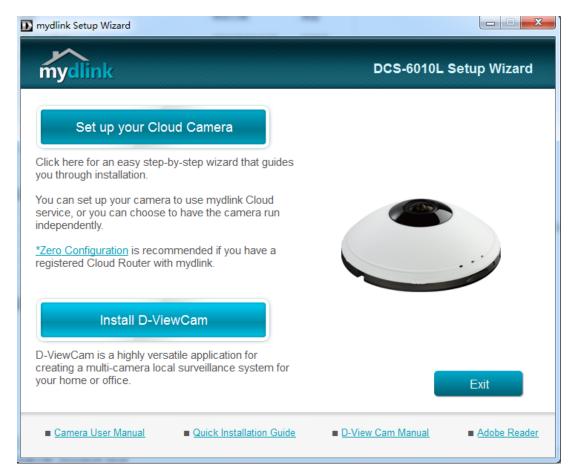

Note: If the autorun program does not open, go to My Computer, browse to your CD drive, and double-click on the autorun.exe file.


D-Link DCS-6010L User Manual

Mac Users

Insert the Installation CD-ROM into your computer's CD drive. On the desktop, open your CD drive and double-click on the **SetupWizard** file.



Within 20-30 seconds, the Setup Wizard will open, which will guide you step-by-step through the installation process from connecting your hardware to configuring your camera and registering it with your mydlink account.

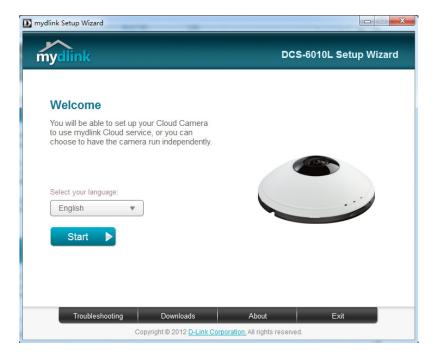

Note: mydlink portal requires JavaTM to function correctly. For more guidelines, please refer to mydlink FAQ pages at https://eu.mydlink.com/faq/mydlink

Manual Hardware Installation

If you wish to set up your camera without using the Camera Setup Wizard, please follow these steps.

Note: In order to use the mydlink features of this product, you will need to go through the Camera Setup Wizard.

Connect the Ethernet Cable

Using the provided Ethernet cable connect one end to your camera and the other-end to your network.


To install the provided Ethernet cable see "Internal Ports" on page 8 for detailed instructions.


Attach the External Power Supply

Attach the external power supply to the power receptor and to your wall outlet or power strip.

To install the provided power supply see "Internal Ports" on page 8 for detailed instructions.

1	Ethernet Cable	Use an RJ45 Ethernet cable or PoE cable to connect to your network
2	Power Cable	Power cable for the provided power adapter

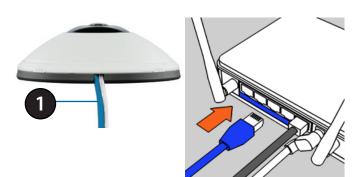

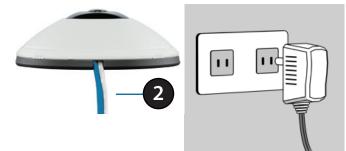

Focusing the Camera

The DCS-6010L can be focused by adjusting the lens.

Step 1

Place the camera on a non-slip surface.

Step 2

Remove the cover by following the steps outlined in "Internal Ports" on page 8.

Step 3


Adjust the focus by rotating the lens in a clockwise or counter clockwise direction until satisfied.


Step 4

Ensure the cables are seated in the cable channel.

Step 5

Seat the cover and rotate to align the cable channel guide over the cable channel.

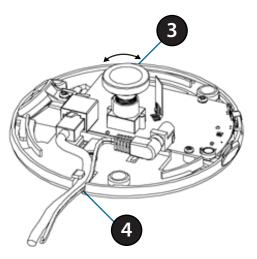

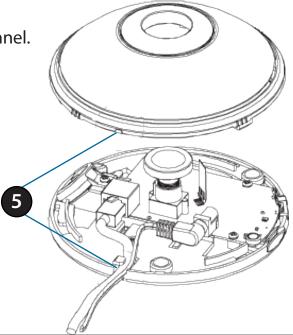

Mounting the Camera

The DCS-6010L is suitable for mounting to a ceiling, wall or desktop using the bracket provided.

Note: In order to use the mydlink features of this product, you will need to go through the Camera Setup Wizard.

Step 1

Unclip the wall bracket from the DCS-6010L by sliding the base down.

Step 2

Position the mounting bracket in the desired location and mark the surface behind it holes using the bracket as a stencil / in pencil

Step 3

Use a 6mm drill bit to make required holes approximately 25mm deep.

Step 4

Insert wall anchors.


Step 5

Affix bracket using the screws provided.

Step 6

Clip the DCS-6010L to the bracket ensuring a tight fit

Note: if mounting on a wall ensure the camera is oriented with the cables positioned to the bottom of the device.

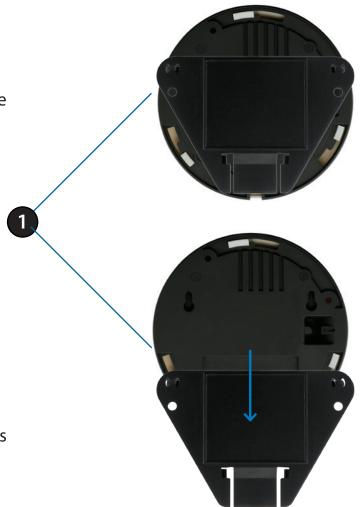

WPS - Push Button Setup

If your router supports WPS, you can use the WPS button on the camera to easily create a secure wireless connection to your network.

To create a WPS connection:

Step 1

Press and hold the WPS button for approximately 5-6 seconds. The WPS LED will blink.

Step 2

Within 60 seconds press the WPS button on your router. On some routers, you may need to log in to the web interface and click on an on-screen button to activate the WPS feature. If you are not sure where the WPS button is on your router, please refer to your router's User Manual.


The DCS-6010L will automatically create a wireless connection to your router. While connecting, the status LED will flash. When the connection process is complete, the status LED will turn solid.

Note: If your router does not support WPS, you can still use the wired connection method on the previous page.



mydlink

After registering your DCS-6010L camera with a mydlink account in the Camera Installation Wizard, you will be able to remotely access your camera from the www.mydlink.com website. After signing in to your mydlink account, you will see a screen similar to the following:

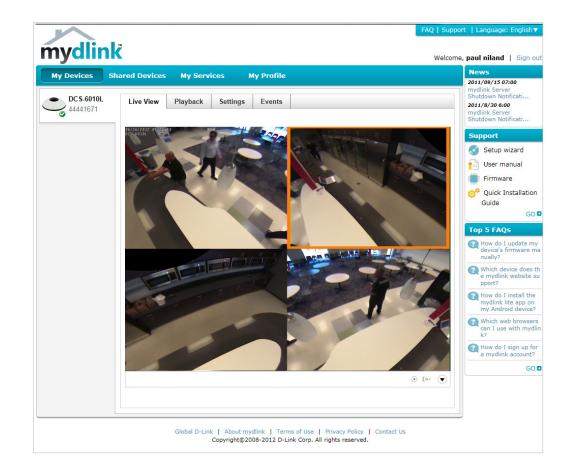

For more details on using your camera with mydlink, go to the **Support** section of the mydlink website and check the **User Manual** section for your product to find the latest instruction guide for your camera's mydlink features.

Configuration Using the Configuration Interface

After completing the Camera Installation Wizard, you are ready to use your camera. The camera's built-in Web configuration utility is designed to allow you to easily access and configure your DCS-6010L. At the end of the wizard, enter the IP address of your camera into a web browser, such as Mozilla Firefox. To log in, use the User name **admin** and the password you created in the Installation Wizard. If you did not create a password, the default password is blank. After entering your password, click **OK**.

Windows Security	×
The server 192.	168.0.103 at DCS-6010L requires a username and password.
	server is requesting that your username and password be sure manner (basic authentication without a secure
	User name Password Remember my credentials
	OK Cancel

Live Video

This section shows your camera's live video. You may select any of the available icons listed below to operate the camera. You may also select your language using the drop-down menu on the left side of the screen.

You can zoom in and out on the live video image using your mouse. Right-click to zoom out or left-click to zoom in on the image.

SD Status: This option displays the status of the SD card. If no SD card has been inserted, this screen will display the message "Card Invalid."

Ŵ	Motion Trigger Indicator	This indicator will change color when a trigger event occurs. Note: The video motion feature for your camera must be
		enabled.
REC	Recording Indicator	When a recording is in progress, this indicator will change color.
	Control Pad	This control pad can be used to electronically pan, tilt, and zoom (ePTZ) within the camera's predefined view area, if one has been defined.
\$	Auto Pan	Click this button to start the automated circular rotation through a regional view (360* continuous rotation). Note: This function does not apply in a Panoramic view because a panoramic view already shows the full coverage.
×	Stop	Click this button to stop the Auto Pan and Auto Rotate functions.
~	Preset Path	Once you have determined a list of preset PTZ positions, click this button to consecutively display views of these positions. The DCS-6010L will display these views continuously. For more information please refer to "Preset" on page 39



Section 4: Configuration

Display Mode	 Here, you can select between the different display modes: Fisheye Mode: shows the full camera view Normal Mode: shows a corrected view similar to a standard camera view that you can move using the control pad. Panoramic Mode: This shows a corrected, full 180
	 view across 2 video panels. Multi-View with Fisheye: This shows a multiple window view, with a full Fisheye view in the topright panel. Multi-View: This shows a multiple window view.



Pan/Tilt/Zoom/ You can set the speed of pan/tilt/zoom/panoramic/sequence Panoramic/ movement by using the dropdown menus.

Sequence Speed:

Language: You may select the interface language using this menu.

Uideo Profile 1

0

Video Profile 2

- Video Profile 3
- Full screen mode
 - Take a Snapshot

- Record a Video Clip
- Set a Storage Folder
- Listen/Stop Audio In (from microphone)
- Start/Stop Audio Out (to speaker)

Go To: If any presets have been defined, selecting a preset from this list will (**Preset List**) display it.






🛄 🖳 📜 💼 📥 🔎 🔍 🕘 🔮 GoTo --Preset List-- 🔹

Setup Setup Wizard

To configure your Network Camera, click **Internet Connection Setup Wizard**. Alternatively, you may click **Manual Internet Connection Setup** to manually configure your Network Camera and skip to "Network Setup" on page 30.

To quickly configure your Network Camera's motion detection settings, click **Motion Detection Setup Wizard**. If you want to enter your settings without running the wizard, click **Manual Motion Detection Setup** and skip to"Motion Detection" on page 41.

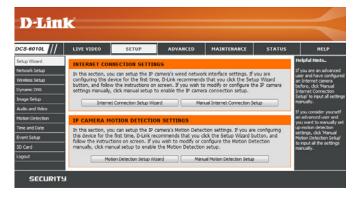

Internet Connection Setup Wizard

This wizard will guide you through a step-by-step process to configure your new D-Link Camera and connect the camera to the internet. Click **Next** to continue.



Note: Select DHCP if you are unsure of which settings to choose.

Click Next to continue.



D-Link DCS-6010L User Manual

Select **Static IP** if your Internet Service Provider has provided you with connection settings, or if you wish to set a static address within your home network. Enter the correct configuration information and click **Next** to continue.

If you are using PPPoE, select **Enable PPPoE** and enter your user name and password, otherwise click **Next** to continue.

If you have a Dynamic DNS account and would like the camera to update your IP address automatically, Select **Enable DDNS** and enter your host information. Click **Next** to continue.

Enter a name for your camera and click **Next** to continue.

D.C.Linck

D-LINCK Step 2: Setup DDNS Setting: If you have a Dynamic DNS account and would like the IP camera to update your IP address automotically, enable DDNS is and enter in your host information below. Please clot on the Nest Duttion to continue. Enable DDNS Server Address would redden com Host Name Basword Timeout I (nours) Back Next Camer



Configure the correct time to ensure that all events will be triggered as scheduled. Click **Next** to continue.







Confirm the settings are correct and click **Apply** to save them..

The settings will be saved to the DCS-6010L and the camera will restart.

Motion Detection Setup Wizard

This wizard will guide you through a step-by-step process to configure your camera's motion detection functions.

Click Next to continue.

Step 1

This step will allow you to enable or disable motion detection, specify the detection sensitivity, and adjust the camera's ability to detect movement.

You may specify whether the camera should capture a snapshot or a video clip when motion is detected.

Please see the **Motion Detection** section on "Motion Detection" on page 41 for information about how to configure motion detection.

Step 2

This step allows you to enable motion detection based on a customized schedule. Specify the day and hours. You may also choose to always record whenever motion is detected.





step 2: Motio	Detection Schedule
email notification settings or FTF	lows you to specify how you receive notification of camera events. Choose between a or arbitratively you can setup an FTP Notification. You will need your email account details. If you are unsure of this information, please contact your ISP. Once you have smatchin, please click on the flext button.
Sur Time	V Mon V Tue V Wed V Thu V Fri V Sat
	Always

Step 3

This step allows you to specify how you will receive event notifications from your camera. You may choose not to receive notifications, or to receive notifications via e-mail or FTP.

Please enter the relevant information for your e-mail or FTP account.

Click Next to continue.

D-Link

is final step allows you to specify how all notification or alternatively you ca ttings or FTP details. If you are unsur tered this information, please click or	e of this information, please co	ou will need your email account
Do not notify me		
e Email		
Sender email address		
Recipient email address		
Server address		
User name		
Password		
Port	25	
) FTP		
Server address		
Port		
User name		
Password		
Remote folder name		

Step 4

You have completed the Motion Detection Wizard.

Please verify your settings and click **Apply** to save them.

Please wait a few moments while the camera saves your settings and restarts.

Step 4: Setup Complete
You have completed your IP camera setup. Please click the Back button if you want to review or modify your setting on the Apply button to save and apply your settings.
Changes saved.IP camera's network is restarting, please wait for 6 seconds

Step 4: Setu	ip Complete	
You have compli on the Apply bu	eted your IP camera setup. Please click tton to save and apply your settings.	the Back button if you want to review or modify your settings or o
	Motion Detection :	Enable
	EVENT :	Video Clip
	Schedule Day :	Sun ,Mon , Tue , Wed , Thu , Fri , Sat ,
	Schedule Time :	Always


Network Setup

Use this section to configure the network connections for your camera. All relevant information must be entered accurately. After making any changes, click the **Save Settings** button to save your changes.

- LAN Settings: This section lets you configure settings for your local area network.
 - **DHCP:** Select this connection if you have a DHCP server running on your network and would like your camera to obtain an IP address automatically.

If you choose DHCP, you do not need to fill out the IP address settings.

- Static IP Client: You may obtain a static or fixed IP address and other network information from your network administrator for your camera. A static IP address may simplify access to your camera in the future.
 - IP Address: Enter the fixed IP address in this field.
- Subnet Mask: This number is used to determine if the destination is in the same subnet. The default value is 255.255.255.0.
- **Default Gateway:** The gateway used to forward frames to destinations in a different subnet. Invalid gateway settings may cause the failure of transmissions to a different subnet.
 - **Primary DNS:** The primary domain name server translates names to IP addresses.
- Secondary DNS: The secondary DNS acts as a backup to the primary DNS.

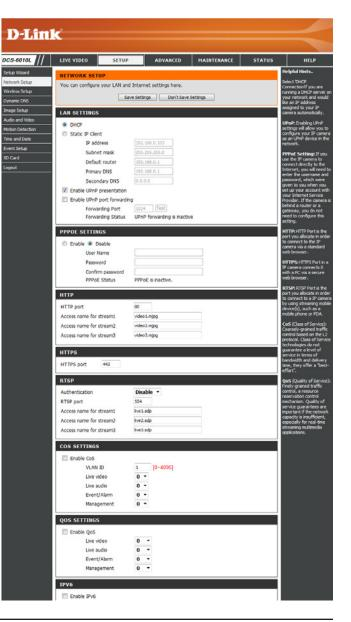

Enable UPnP Presentation: Enabling this setting allows your camera to be configured as a UPnP device on your network.

Enable UPnP Port Forwarding: Enabling this setting allows the camera to add port forwarding entries into the router automatically on a UPnP capable network.

Enable PPPoE: Enable this setting if your network uses PPPoE.

User Name / Password: Enter the username and password for your PPPoE account. Re-enter your password in the Confirm Password field. You may obtain this information from your ISP.

HTTP Port: The default port number is 80.

Access Name for Stream 1~3: The default name is video#.mjpg, where # is the number of the stream.

- **HTTPS Port:** You may use a PC with a secure browser to connect to the HTTPS port of the camera. The default port number is 443.
- **RTSP Port:** The port number that you use for RTSP streaming to mobile devices, such as mobile phones or PDAs. The default port number is 554. You may specify the address of a particular stream. For instance, live1.sdp can be accessed at rtsp://x.x.x./video1.sdp where the x.x.x.x represents the ip address of your camera.

LAN SETTI	NGS		
OHCP			
Static IP	Client		
IP	address	192.168.0.103	
S	ubnet mask	255.255.255.0	
D	efault router	192.168.0.1	
Pr	rimary DNS	192.168.0.1	
S	econdary DNS	0.0.0	
🔽 Enable U	PnP presentation		
🔲 Enable U	PnP port forwarding		
Fo	orwarding Port	1024 Test	
Fo	orwarding Status	UPnP forwarding is inactive	
PPPOE SET	TINGS		
C Enable			
	ser Name		1
	assword]
]
	onfirm password PPoE Status	PPPoE is inactive.	
	THE Status		
нттр			
HTTP port		80	
Access name	for stream1	video 1.mjpg	
Access name	for stream2	video2.mjpg	
Access name	for stream3	video3.mjpg	
HTTPS			
HTTPS port	443		
RTSP			
Authenticatio	n	Disable 🔻	
RTSP port		554	
Access name	for stream1	live1.sdp	
Access name	for stream2	live2.sdp	
Access name	for stroom?	live3 cdp	

- **Enable CoS:** Enabling the Class of Service setting implements a best-effort policy without making any bandwidth reservations.
- **Enable QoS:** Enabling QoS allows you to specify a traffic priority policy to ensure a consistent Quality of Service during busy periods. If the Network Camera is connected to a router that itself implements QoS, the router's settings will override the QoS settings of the camera.
- **Enable IPV6:** Enable the IPV6 setting to use the IPV6 protocol. Enabling the option allows you to manually set up the address, specify an optional IP address, specify an optional router and an optional primary DNS.
- Enable Multicast for stream The DCS-6010L allows you to multicast each of the available streams via group address and specify the TTL value for each stream. Enter the port and TTL settings you wish to use if you do not want to use the defaults.

COS SETTINGS	
Enable CoS	
VLAN ID 1	1
Live video (
Live audio (
Event/Alarm	-
Management) •
QOS SETTINGS	
Enable QoS	
Live video () -
Live audio C) -
Event/Alarm () 🔻
Management () •
IPV6	
Enable IPv6	
IPv6 Information	
Manually setup the IP addre	SS
Optional IP address / Prefix	length / 64
Optional default router	
Optional primary DNS	
MULTICAST	
Enable multicast for stream 1	
Enable multicast for stream 1 Multicast group address	239.1.1.1
Enable multicast for stream 1 Multicast group address Multicast video port	6550
Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port	6550
Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port	6550 6551 6552
Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port	6550 6551 6552 6553
Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255]	6550 6551 6552
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 	6550 6551 6552 6553 64
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 Multicast group address 	6550 6551 6552 6553 64 239.1.1.2
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 Multicast group address Multicast video port 	6550 6551 6552 6553 64 239.1.1.2 6554
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port 	6550 6551 6552 6553 64 239.1.1.2 6554 6555
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port 	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6556
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP addio port Multicast RTCP audio port Multicast RTCP audio port Multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port 	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6555 6555 6555
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP udio port Multicast RTCP audio port Multicast RTCP audio port Multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] 	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6556
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 3 	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6555 6555 6557 64
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Multicast RTCP audio port Multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 3 Multicast group address 	6550 6551 6552 6553 64 239.1.1.2 6555 6555 6555 6555 6557 64 239.1.1.3
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 3 Multicast group address Multicast group address Multicast video port 	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6555 6555 6557 64 239.1.1.3 6558
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 3 Multicast group address Multicast group address Multicast video port Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP video port 	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6555 6555 6555 6555 6557 64 239.1.1.3 6558 6559
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 3 Multicast group address Multicast group address Multicast video port Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP video port Multicast RTCP video port Multicast RTCP video port Multicast audio port 	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6555 6556 6557 64 239.1.1.3 6558 6559 6550
 Enable multicast for stream 1 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP addio port Multicast RTCP audio port Multicast RTCP audio port Multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 3 Multicast group address Multicast video port Multicast video port Multicast video port Multicast video port Multicast RTCP video port Multicast RTCP video port 	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6555 6555 6555 6555 6557 64 239.1.1.3 6558 6559

Save Settings Don't Save Settings

Wireless Setup

This section allows you to set up and configure the wireless settings on your camera. After making any changes, click the **Save Settings** button to save your changes.

- Site Survey: Click the Rescan button to scan for available wireless networks. After scanning, you can use the drop-down box to select an available wireless network. The related information (SSID, Wireless Mode, Channel, Authentication, Encryption) will be automatically filled in for you.
 - **SSID:** Enter the SSID of the wireless access point you wish to use.
- Wireless Mode: Use the drop-down box to select the mode of the wireless network you wish to connect to. Infrastructure is normally used to connect to an access point or router. Ad-Hoc is usually used to connect directly to another computer.
 - **Channel:** If you are using Ad Hoc mode, select the channel of the wireless network you wish to connect to, or select Auto.
- Authentication: Select the authentication you use on your wireless network Open, Shared, WPA-PSK, or WPA2-PSK.
 - **Encryption:** If you use WPA-PSK or WPA2-PSK authentication, you will need to specify whether your wireless network uses TKIP or AES encryption. If you use Open or Shared authentication, WEP encryption should be the setting.
 - Key: If you use WEP, WPA-PSK, or WPA2-PSK authentication, enter the Key (also known as password) used for your wireless network.



Dynamic DNS

DDNS (Dynamic Domain Name Server) will hold a DNS host name and synchronize the public IP address of the modem when it has been modified. A user name and password are required when using the DDNS service. After making any changes, click the **Save Settings** button to save your changes.

Enable DDNS: Select this checkbox to enable the DDNS function.

Server Address: Select your Dynamic DNS provider from the pull down menu or enter the server address manually.

Host Name: Enter the host name of the DDNS server.

- User Name: Enter the user name or e-mail used to connect to your DDNS account.
 - Password: Enter the password used to connect to your DDNS server account.

Timeout: Enter the DNS timeout values you wish to use.

Status: Indicates the connection status, which is automatically determined by the system.

D-Lin	k					
DC3-6010L	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Sehap Wizard Network Sehap Wireless Sehap Dynamic DNS Image Sehap Audio and Video Motion Detection Time and Date Event Sehap	DYNAMIC DHS The Dynamic DHS (www.yourdoman broadband Interne service, you can er address is. Sign up for D-Link DYNAMIC DHS	Helpful Hints Dynamic DHG is useful if you have a DD, or Cable penkce provider that changes you modern that datense pendodaly. This will allow you to ansign a website datama nume to your IP camea antetad of connecting through an IP address.				
SD Card Logout	Enable DDNS Server Address Host Name User Name Password Verify Password Timeout Status	vww.dinkdd vww.dinkdd 24 Inactive Save Setti		< < [www.dirkddra.com (hours)	v	

Image Setup

In this section, you may configure the video image settings for your camera. A preview of the image will be shown in Live Video.

Mirror: This will mirror the image horizontally.

- Flip: This will flip the image vertically. When turning Flip on, you may want to consider turning Mirror on as well.
- **Power Line:** Select the frequency used by your power lines to avoid interference or distortion.
- White Balance: Use the drop-down box to change white balance settings to help balance colors for different environments. You can choose from Auto, Outdoor, Indoor, Fluorescent, and Push Hold.
- **Exposure Mode:** Changes the exposure mode. Use the drop-down box to set the camera for Indoor, Outdoor, or Night environments, or to Moving to capture moving objects. The Low Noise option will focus on creating a high-quality picture without noise. You can also create 3 different custom exposure modes. The Max Gain setting will allow you to control the maximum amount of gain to apply to brighten the picture.
 - **Denoise:** This setting controls the amount of noise reduction that will be applied to the picture.

Brightness: Adjust this setting to compensate for backlit subjects.



Section 4: Configuration

Contrast: Adjust this setting to alter the color intensity/strength.

- Saturation: This setting controls the amount of coloration, from grayscale to fully saturated.
- **Sharpness:** Specify a value from 0 to 8 to specify how much sharpening to apply to the image.
- **Reset Default** Click this button to reset the image to factory default settings.
 - Mounting: Select the correct mounting type from either **Ceiling**, **Wall**, or **Desktop** to ensure the PTZ controls respond accurately.




Audio and Video

You may configure up to 3 video profiles with different settings for your camera. Hence, you may set up different profiles for your computer and mobile display. In addition, you may also configure the two-way audio settings for your camera. After making any changes, click the **Save Settings** button to save your changes.

- Mode: Set the video codec to be used to JPEG, MPEG-4, or H.264.
- Frame size: This sets the resolution of the video stream. (1600 x 1200, 1200 x 900, 800 x 600, 400 x 300)
- Maximum frame rate: A higher frame rate provides smoother motion for videos, and requires more bandwidth. Lower frame rates will result in stuttering motion, and requires less bandwidth.
 - Video Quality: This limits the maximum frame rate, which can be combined with the "Fixed quality" option to optimize the bandwidth utilization and video quality. If fixed bandwidth utilization is desired regardless of the video quality, choose "Constant bit rate" and select the desired bandwidth.
 - **Constant bit rate:** The bps will affect the bit rate of the video recorded by the camera. Higher bit rates result in higher video quality.
 - **Fixed quality:** Select the image quality level for the camera to try to maintain. High quality levels will result in increased bit rates.

Encoding Choose between G.726 or G.711

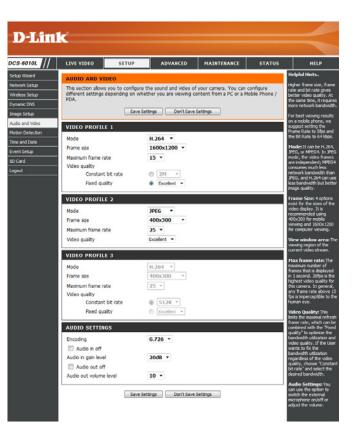

Audio in off: Selecting this checkbox will mute incoming audio.

Audio in gain level: This setting controls the amount of gain applied to incoming audio to increase its volume.

Audio out off: Selecting this checkbox will mute outgoing audio.

Audio out volume level: This setting controls the amount of gain applied to outgoing audio to increase its volume.

AUDIO AND VIDEO

	the sound and video of your camera. You can configure ther you are viewing content from a PC or a Mobile Phone /
Save Se	ttings Don't Save Settings
VIDEO PROFILE 1	
Mode	H.264 🔻
Frame size	1600x1200 -
Maximum frame rate	15 -
Video quality	
Constant bit rate	② 2M ▼
Fixed quality	Excellent
VIDEO PROFILE 2	
Mode	JPEG 🔻
Frame size	400x300 -
Maximum frame rate	25 -
Video quality	Excellent 💌
VIDEO PROFILE 3	
Mode	H.264 ·
Frame size	400x300 -
Maximum frame rate	25 -
Video quality	
Constant bit rate	
Fixed quality	Excellent 👻
AUDIO SETTINGS	
Encoding	G.726 -
Audio in off	
Audio in gain level	20dB -
Audio out off	
Audio out volume level	10 •


Save Settings Don't Save Settings

Preset

This screen allows you to set preset points for the ePTZ function of the camera, which allows you to look around the camera's viewable area by using a zoomed view. Presets allow you to quickly go to and view a specific part of the area your camera is covering, and you can create preset sequences, which will automatically change the camera's view between the different presets according to a defined order and timing you can set.

Arrow Buttons and Home Button: Use these buttons to move to a specific part of the viewing area, which you can then set as a preset. Click the Home button to return to the center of the viewing area.

- Input Preset Name: Enter the name of the preset you want to create, then click the Add button to make a new preset. If an existing preset has been selected from the Preset List, you can change its name by typing in a new name, then clicking the Rename button.
 - **Preset List:** Click this drop-down box to see a list of all the presets that have been created. You can select one, then click the **GoTo** button to change the displayed camera view to the preset. Clicking the **Remove** button will delete the currently selected preset.

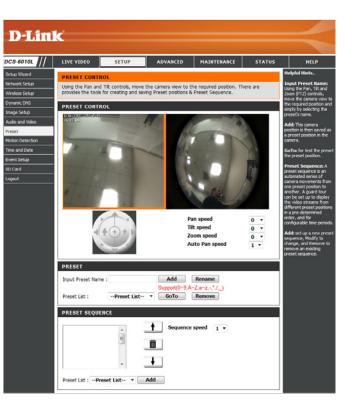

Preset Sequence: This section allows you to create a preset sequence, which automatically moves the camera's view between a set of preset views.

Preset List: To add a preset to the sequence, select it from the dropdown box at the bottom of this window, set the Dwell time to determine how long the camera view will stay at that preset, then click the Add button. The preset name will appear in the list, followed by the dwell time to view that preset for.

You can rearrange your presets in the sequence by selecting a preset in the sequence, then clicking the arrow buttons to move it higher or lower in the current sequence.

Clicking the trash can button will remove the currently selected preset from the sequence.

If you want to change the dwell time for a preset, select it from the list, enter a new dwell time, then click the **Update** button.

 •	Sequence speed 1 -
=	
Ŧ	ŧ

Motion Detection

Enabling Video Motion will allow your camera to use the motion detection feature. You may draw a finite motion area that will be used for monitoring. After making any changes, click the **Save Settings** button to save your changes.

Enable Video Motion: Select this box to enable the motion detection feature of your camera.

- Sensitivity: Specifies the measurable difference between two sequential images that would indicate motion. Please enter a value between 0 and 100.
- **Percentage:** Specifies the amount of motion in the window being monitored that is required to initiate an alert. If this is set to 100%, motion is detected within the whole window will trigger a snapshot.
- **Draw Motion Area:** Draw the motion detection area by dragging your mouse in the window (indicated by the red square).
- **Erase Motion Area:** To erase a motion detection area, simply click on the red square that you wish to remove.

Right clicking on the camera image brings up the following menu options:

Select All: Draws a motion detection area over the entire screen. Clear All: Clears any motion detection areas that have been drawn. Restore: Restores the previously specified motion detection areas.



Time and Date

This section allows you to automatically or manually configure, update, and maintain the internal system clock for your camera. After making any changes, click the **Save Settings** button to save your changes.

Time Zone: Select your time zone from the drop-down menu.

Enable Daylight Saving: Select this to enable Daylight Saving Time.

Auto Daylight Saving: Select this option to allow your camera to configure the Daylight Saving settings automatically.

Set Date and Time Manually: Selecting this option allows you to configure the Daylight Saving date and time manually.

Offset: Sets the amount of time to be added or removed when Daylight Saving is enabled.

Synchronize with NTP Server: Enable this feature to obtain time automatically from an NTP server.

NTP Server: Network Time Protocol (NTP) synchronizes the DCS-6010L with an Internet time server. Choose the one that is closest to your location.


Set the Date and Time Manually: This option allows you to set the time and date manually.

Copy Your Computer's Time This will synchronize the time information from your PC. **Settings:**

LIVE VIDEO	SETUP	ADVANCED	MAINTENANC	E STATUS	н
TIME AND DATE					Helpful Hint
You can set the curre	nt time for the B		e Settings		Good timekee important for logs and sche firewall rules.
TIME CONFIGURA	TION				Time Zone: time zone fro down menu.
Time Zone (GMT+08:	00) Taipei		•		
Enable Daylight S	laving				Enable Day Saving: Sele enable the d
Auto Dayligi					saving time.
	d time manually				Auto Dayli When you se clock is auto
Offset	+2:00	Week Day of w	eek Hour Minutes		adjusted acc daylight savi
Start time			- 00 00		the selected
End time	10	• 1 • Sunday	- 00 00		Offset: Sele offset, if you observes da
AUTOMATIC TIME		ION			time. Synchroniz Server: Wit
Synchronize with					selected, the synchronize
NTP Server	ntp.dlink.com	tw	<< Select NTP Save	r •	settings with server over
SET DATE AND TE	ME MANUALLY				whenever the starts up. If
Set date and tim	e manually				timeserver ca reached, no will be apple
Year 2012	Mont	h 6 -	Day	30 -	NTP Server
Hour 11 *	Minut	e 13 ~	Second	22 -	Time Protoco synchronizes
	Copy You	r Compulter's Time 5	ettings		camera with time server.
L					one that is di your location
			e Settings		

Event Setup

In a typical application, when motion is detected, the DCS-6010L sends images to a FTP server or via e-mail as notifications. As shown in the illustration below, an event can be triggered by many sources, such as motion detection. When an event is triggered, a specified action will be performed. You can configure the Network Camera to send snapshots or videos to your e-mail address or FTP site.

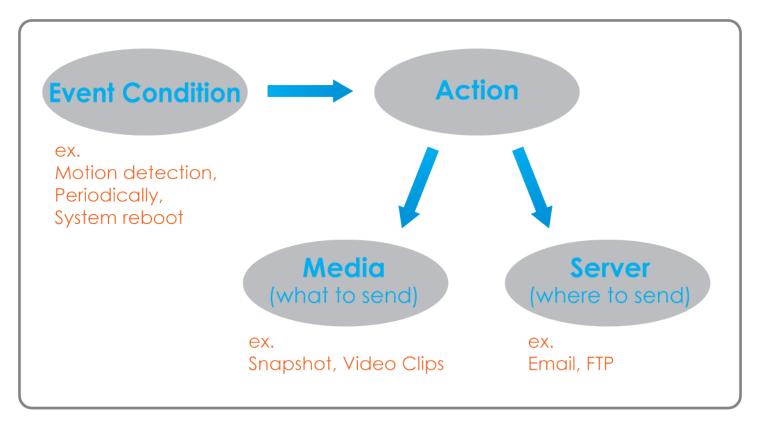

To start plotting an event, it is suggested to configure server and media columns first so that the Network Camera will know what action shall be performed when a trigger is activated.

The Event Setup page includes 4 different sections.

- Event
- Server
- Media
- Recording
- 1. To add a new item "event, server or media," click **Add**. A screen will appear and allow you to update the fields accordingly.
- 2. To delete the selected item from the pull-down menu of event, server or media, click **Delete**.
- 3. Click on the item name to pop up a window for modifying.

D-Lini	¢					\prec
5-6010L	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
p Word work Schap dess Schap amc CMG pr Schap or and Volco on Detection r and Date tt Schap sut	Add to pop a wind delate the selectes window to del & & server and 5 medu server and 5 medu Add 5 server 1 • MEDIA Media freespace: Name Type Add 5 server 1 • MEDIA Media freespace: Name Type Add Peda1 • EVENT Name Status Event1 • Nadd Event1 • RECORDING	Sun Hon Tue V Sun Monores V Address/Loc moliquida.inc. Delete Sun Hon Tue V Sun Mon Tue	em of event, server, server, media or reco st 3 events and 2 re- ation com	Ti, dower, media acci (r media or recording, Cick drag. Cick on the term conding. There can be a media term of the term Time Trigger 0:00-23:59 Motion	cording. Clark Dekite to name to pop a t most 5 d d d d d d d d d d d d d d d d d d d	electron trans aggests acting server through and a first before through and a first before through a server that are the able to modify or the able to modify and the able to able the able th
SECURITY						
		Copyrigh	nt © 2011 D-Link Corp	oration.		

Add Server

You can configure up to 5 servers to save snapshots and/or video to. After making any changes, click the **Save Settings** button to save your changes.

Server Name: Enter the unique name of your server.

- E-mail: Enter the configuration for the target e-mail server account.
 - **FTP:** Enter the configuration for the target FTP server account.

Network Storage: Specify a network storage device. Only one network storage device is supported.

SD Card: Use the camera's onboard SD card storage.

SERVER You can s	set at most 5 different servers he	ere for different event.
	Test Save Setti	ngs Don't Save Settings
SERVER	ТҮРЕ	
Server N	lame:	
Emai	i	
	Sender email address	
	Recipient email address	
	Server address	
	User name	
	Password	
	Port	25
	This server requires a sec	ture connection (StartTLS)
© FTP		
	Server address	
	Port	21
	User name	
	Password	
	Remote folder name	
	Passive mode	
Netv	vork storage	
	Network storage location	
	(for example:\\my_nas\disk\fo	older)
	Workgroup	
	User name	
	Password	
	Primary WINS server	
SD C	ard	

Test Save Settings Don't Save Settings

Add Media

There are three types of media, **Snapshot**, **Video Clip**, and **System Log**. After making any changes, click the **Save Settings** button to save your changes.

Media Name: Enter a unique name for media type you want to create.

Snapshot: Select this option to set the media type to snapshots.

Source: Set the video profile to use as the media source. Refer to Audio and Video on "Audio and Video" on page 37 for more information on video profiles.

Send pre-event image(s) [0~4]: Set the number of pre-event images to take. Pre-event images are images taken before the main event snapshot is taken.

Send post-event image(s) [0~7]: Set the number of post-event images to take. Post-event images are images taken after the main event snapshot is taken. You can set up to 7 post-event images to be taken.

File name prefix: The prefix name will be added on the file name.

Add date and time suffix to file Check it to add timing information as file name suffix. name:

MEDI	A
You ca	n set at most 5 different media here for different event.
	Save Settings Don't Save Settings
MEDI	Α ΤΥΡΕ
Media	name:
Sr	napshot
	Source: Profile 1 🔻
	Send 1 pre-event image(s) [0~4]
	Send 1 post-event image(s) [0~7]
	File Name Prefix:
	Add date and time suffix to file name
🔘 Vi	deo Clip
	Source: Profile 1 🔻
	Pre-event recording: Second(s) [0~4]
	Maximum duration: Second(s) [1~100]
	Maximum file size: Kbytes [100~5000]
	File Name Prefix:
© Sy	stem log

Video clip: Select this option to set the media type to video clips.

- Source: Set the video profile to use as the media source. Refer to "Audio and Video" on page 37 for more information on video profiles.
- **Pre-event recording:** This sets how many seconds to record before the main event video clip starts. You can record up to 4 seconds of pre-event video.
- Maximum duration: Set the maximum length of video to record for your video clips.

Maximum file size: Set the maximum file size to record for your video clips.

- File name prefix: This is the prefix that will be added to the filename of saved video clips.
 - System log: Select this option to set the media type to system logs. This will save the event to the camera system log, but will not record any snapshots or video.

MEDIA	
You can set	at most 5 different media here for different event.
	Save Settings Don't Save Settings
MEDIA TY	PE
Media nan	ie:
Snapsh	ot
	ce: Profile 1 🔻
Send	1 pre-event image(s) [0~4]
Send	1 post-event image(s) [0~7]
File N	lame Prefix:
	Add date and time suffix to file name
Video (Clip
Sour	ce: Profile 1 🔻
Pre-e	event recording: Second(s) [0~4]
Maxir	num duration: Second(s) [1~100]
Maxir	num file size: Kbytes [100~5000]
File N	lame Prefix:
System	n log

Save Settings Don't Save Settings

Add Event

Create and schedule up to 2 events with their own settings here. After making any changes, click the **Save Settings** button to save your changes.

Event name: Enter a name for the event.

Enable this event: Select this box to activate this event.

Priority: Set the priority for this event. The event with higher priority will be executed first.

Delay: Select the delay time before checking the next event. It is used for motion detection events.

Trigger: Specify the input type that triggers the event.

Video Motion Detection: Motion is detected during live video monitoring. Select the windows that need to be monitored.

Periodic: The event is triggered in specified intervals. The trigger interval unit is in minutes.

System Boot: Triggers an event when the system boots up.

Network Lost: Triggers an event when the network connection is lost.

Passive Infrared Sensor: Triggers an event when the PIR sensor is activated by moving infrared objects even in dark environment.

Time: Select Always or enter the time interval.

Server: Specify the location where the event information should be saved to.

EVENT
You can set at most 3 events like motion detection or digital input trigger here and arrange the detection schedule at the same time.
Save Settings Don't Save Settings
EVENT
Event name:
Enable this event
Priority: normal 🔻
Delay for 10 seconds before detecting next event [For motion detection and digital input]
TRIGGER
Video motion detection
Periodic
Trigger every 1 minutes
System boot
Network lost
EVENT SCHEDULE
✓ Sun ♥ Mon ♥ Tue ♥ Wed ♥ Thu ♥ Fri ♥ Sat
Time
Always
© From 00 ♥ 00 ♥ To 23 ♥ 59 ♥

Save Settings	Don't Save Settings
---------------	---------------------

Add Recording

Here you can configure and schedule the recording settings. After making any changes, click the **Save Settings** button to save your changes.

Recording entry name: The unique name of the entry.

Enable this recording: Select this to enable the recording function.

Priority: Set the priority for this entry. The entry with a higher priority value will be executed first.

Source: The source of the stream.


Recording schedule: Scheduling the recording entry.

Recording settings: Configuring the setting for the recording.

Destination: Select the folder where the recording file will be stored.

Total cycling recording size: Please input a HDD volume between 1MB and 2TB for recording space. The recording data will replace the oldest record when the total recording size exceeds this value. For example, if each recording file is 6MB, and the total cyclical recording size is 600MB, then the camera will record 100 files in the specified location (folder) and then will delete the oldest file and create new file for cyclical recording.

Please note that if the free HDD space is not enough, the recording will stop. Before you set up this option please make sure your HDD has enough space, and it is better to not save other files in the same folder as recording files.

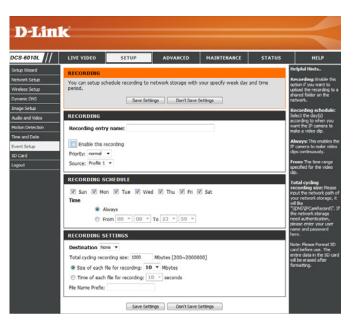

Section 4: Configuration

Size of each file for recording: If this is selected, files will be separated based on the file size you specify.

Time of each file for recording: If this is selected, files will be separated based on the maximum length you specify.

File Name Prefix: The prefix name will be added on the file name of the recording file(s).



SD Card


Here you may browse and manage the recorded files which are stored on the SD card.

Format SD Card: Click this icon to automatically format the SD card and create "Picture" & "Video" folders.

View Recorded Picture: If the picture files are stored on the SD card, click on the picture folder and choose the picture file you would like to view.

Playback Recorded Video: If video files are stored on the SD card, click on the video folder and choose the video file you would like to view.

Refresh: Reloads the file and folder information from the SD card.

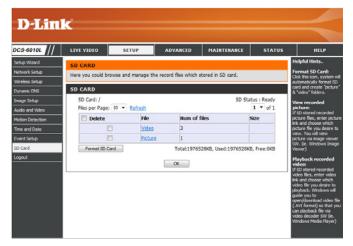

Advanced HTTPS

This page allows you to install and activate an HTTPS certificate for secure access to your camera. After making any changes, click the **Save Settings** button to save your changes.

Enable HTTPS Secure Connection: Enable the HTTPS service.

Create Certificate Method: Choose the way the certificate should be created. Three options are available:

Create a self-signed certificate automatically Create a self-signed certificate manually Create a certificate request and install

Status: Displays the status of the certificate.

Note: The certificate cannot be removed while the HTTPS is still enabled. To remove the certificate, you must first uncheck **Enable HTTPS secure connection**.



Access List

Here you can set access permissions for users to view your DCS-6010L.

- Allow list: The list of IP addresses that have the access right to the camera.
- Start IP address: The starting IP Address of the devices (such as a computer) that have permission to access the video of the camera. Click Add to save the changes made.

Note: A total of seven lists can be configured for both columns.


- **End IP address:** The ending IP Address of the devices (such as a computer) that have permission to access the video of the camera.
- Delete allow list: Remove the customized setting from the Allow List.
 - **Deny list:** The list of IP addresses that have no access rights to the camera.

Delete deny list: Remove the customized setting from the Delete List.

For example:

When the range of the Allowed List is set from 1.1.1.0 to 192.255.255.255 and the range of the Denied List is set from 1.1.1.0 to 170.255.255.255. Only users with IPs located between 171.0.0.0 and 192.255.255.255 can access the Network Camera.



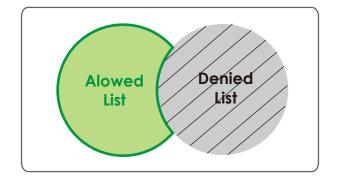

Maintenance Device Management

You may modify the name and administrator's password of your camera, as well as add and manage the user accounts for accessing the camera. You may also use this section to create a unique name and configure the OSD settings for your camera.

D

DCS-6

Admin Password Setting: Set a new password for the administrator's account.

Add User Account: Add new user account.

User Name: The user name for the new account.

Password: The password for the new account.

- User List: All the existing user accounts will be displayed here. You may delete accounts included in the list, but you may want to reserve at least one as a guest account.
- **Camera Name:** Create a unique name for your camera that will be added to the file name prefix when creating a snapshot or a video clip.
 - **Enable OSD:** Select this option to enable the On-Screen Display feature for your camera.
 - Label: Enter a label for the camera, which will be shown on the OSD when it is enabled.
 - **Show Time:** Select this option to enable the time-stamp display on the video screen.

LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HE
ADMIN					Helpful Hints
delete user account	s). You can confi n also enable the	gure the information, OSD (On-Screen Dis	r IP camera as well as ac such as IP camera's na oby) feature in order to	me and time	Enabling OSD, camera name a will be displaye video screen fr user.
ADMIN PASSWO	RD SETTING				For security po
					change the pa your administr
New Password Retype Password			8 characters maximum		account. Be si down the new
Recype Password		19	are		to avoid havin the IP camera event that it is
ADD USER ACCO	UNT				
ADD USER ACCO	UNI				
User Name		20 .	isers maximum		
New Password		63 (haracters maximum		
Retype Password					
	Add				
USER LIST					
	User list	· Delete			
User Name					
User Name					
User Name DEVICE SETTING					
	8				
DEVICE SETTING	DCS-6010L	63 (characters maximum		
DEVICE SETTING					
DEVICE SETTING	DCS-6010L		characters maximum		

System

In this section, you may backup, restore and reset the camera configuration, or reboot the camera.

Save To Local Hard Drive: You may save your current camera configuration as a file on your computer.

Local From Local Hard Drive: Locate a pre-saved configuration by clicking Browse and then restore the pre-defined settings to your camera by clicking Load Configuration.

Restore to Factory Default: You may reset your camera and restore the factory settings by clicking **Restore Factory Defaults**.

Reboot Device: This will restart your camera.

D-Lin						
DC3-6010L	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Admin System Firmware Upgrade Looout	SYSTEM Here you may ba SYSTEM	ckup, restore, and r	reboot your IP camera.			Helpful Hints After the factory's default settings have been restored, use the instaliation wizard
	Save To Local H		Save Configuration	Варизн		software provided with your IP camera to search and connect to the IP camera.
	Restore To Fact	ory Defaults	Restore Factory D	Defaults		

Firmware Upgrade

The camera's current firmware version will be displayed on this screen. You may visit the D-Link Support Website to check for the latest available firmware version.

To upgrade the firmware on your DCS-6010L, please download and save the latest firmware version from the D-Link Support Page to your local hard drive. Locate the file on your local hard drive by clicking the **Browse** button. Select the file and click the **Upload** button to start upgrading the firmware.

Current Firmware Version: Displays the detected firmware version.

Current Product Name: Displays the camera model name.

File Path: Locate the file (upgraded firmware) on your hard drive by clicking **Browse**.

Upload: Uploads the new firmware to your camera.



Status Device Info

This page displays detailed information about your device and network connection.

LIVE VIDEO	SETUP				
	SLIGF	ADVANCED	MAINTENANCE	STATUS	HELI
DEVICE INFO					Helpful Hints
All of your networ displayed here.	rk connection details	are displayed on this (page. The firmware ver	SION IS AISO	This page display information abou camera and netw settings.
INFORMATION					Securigo.
IP camera Name Time & Date Firmware Version MAC Address IP Address IP Subnet Mask Default Gateway Primary DNS Secondary DNS PPPoE DDNS Agent Version	F0:7D:68:09:A 192.168.0.103 255.255.255.0	3:D9			

Logs

This page displays the log information of your camera. You may download the information by clicking **Download**. You may also click **Clear** to delete the saved log information.

D-Link								
DCS-6010L	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP		
Device Info	SYSTEM LOG	·		· · ·		Helpful Hints		
Log Loqout	The system log r	You can save the log to your local hard IP camera by dicking the Download button, and you can dear the log by dicking on the						
	CURRENT LOG							
	2. 2012-06-30 3. 2012-06-30 4. 2012-06-30 5. 2012-06-30 6. 2012-06-30 7. 2012-06-30 9. 2012-06-30 10. 2012-06-30 11. 2012-06-30 12. 2012-06-30 14. 2012-06-30 15. 2012-06-30 16. 2012-06-30 17. 2012-06-30 19. 2012-06-30 19. 2012-06-30 20. 2012-06-30 Eirst Page	CURRENT LOG 1. 2012-06-30 11:16:53 admin FROM 192.168.0.100 TURN ON LED 2. 2012-06-30 11:16:46 admin FROM 192.168.0.100 TURN OFF LED 3. 2012-06-30 11:15:56 IP CAMERA Received MOTION Trigger 5. 2012-06-30 11:15:56 IP CAMERA Received MOTION Trigger 6. 2012-06-30 11:15:56 MOTION STOPPED 6. 2012-06-30 11:15:56 MOTION STOPPED 6. 2012-06-30 11:14:48 SD CARD SIZE 1976528 KB 7. 2012-06-30 11:14:37 IP CAMERA Received MOTION Trigger 8. 2012-06-30 11:14:31 MOTION STOPPED 9. 2012-06-30 11:14:29 IP CAMERA Received MOTION Trigger 10. 2012-06-30 11:13:17 IP CAMERA Received MOTION Trigger 11. 2012-06-30 11:13:16 admin FROM 192.168.0.100 SET MOTION BLOCK TABLE 13. 2012-06-30 11:12:25 admin FROM 192.168.0.100 SET PROFILE 1 FRAMERATE 15 14. 2012-06-30 11:12:13 MOTION STOPPED 15. 2012-06-30 11:12:07 IP CAMERA Received MOTION Trigger 16. 2012-06-30 11:12:06 admin FROM 192.168.0.100 TURN ON MASK AREA 2 17. 2012-06-30 11:12:06 admin FROM 192.168.0.100 TURN ON MASK AREA 3 18. 2012-06-30 11:12:06 admin FROM 192.168.0.100 TURN ON MASK AREA 3 19. 2012-06-30 11:12:06 admin FROM 192.168.0.100 TURN OFF MASK AREA 3 19. 2012-06-30 11:12:06 admin FROM 192.168.0.100 TURN OFF MASK AREA 2 20. 2012-06-30 11:11:56 admin FROM 192.168.0.100 TURN OFF MASK AREA 3 19. 2012-06-3						

Help

This page provides helpful information regarding camera operation.



Technical Specifications

Camera	Camera Hardware Profile	 1/3.2" 2 megapixel progressive CMOS sensor Minimum illumination: 2.0 lux Built-in microphone and speaker 10x digital zoom Focal length: 1.25 mm Aperture: F2.0 	 Angle of view: (H) 180° (V) 180° (D) 180° 		
	Image Features	 Configurable image size, quality, frame rate, and bit rate Fisheye distortion correction Time stamp and text overlays 	 Configurable privacy mask zones Configurable shutter speed, brightness, saturation, contrast, and sharpness Configurable motion detection windows 		
	Video Compression	 Simultaneous H.264/MPEG-4/MJPEG format compression H.264/MPEG-4 multicast streaming 	 JPEG for still images 		
	Video Resolution	1600 x 1200, 1200 x 900, 800 x 600, 400 x 300			
	Audio Support	G.726, G.711			
	External Device Interface	 10/100 BASE-TX Fast Ethernet port IEEE 802.11n 2.4GHz single band wireless 	 MicroSD/SDHC card slot 		
Network	Network Protocols	IPv6 IPv4 TCP/IP UDP ICMP DHCP client NTP client (D-Link) DNS client DDNS client (D-Link) SMTP client FTP client	HTTP / HTTPS Samba Client PPPoE UPnP port forwarding RTP / RTSP/ RTCP IP filtering QoS CoS Multicast IGMP ONVIF compliant		
	Security	 Administrator and user group protection Password authentication 	 HTTP and RTSP digest encryption 		

System Management	System Requirements for Web Interface	 Browser: Internet Explorer, Firefox, Chrome, Safari 	
	Event Management	 Motion detection 	 Supports multiple SMTP and FTP servers
		Event notification and uploading of snapshots/video clips via	 Multiple event notifications
		e-mail or FTP	 Multiple recording methods for easy backup
	Remote Management	 Take snapshots/video clips and save to local hard drive or NAS via web browser 	 Configuration interface accessible via web browser
	Mobile Support	Windows 7/Vista/XP system, Pocket PC, or mobile phone	mydlink mobile app for iOS and Android mobile devices
	D-ViewCam [™] System Requirements	Operating System: Microsoft Windows 7/Vista/XP	Protocol: Standard TCP/IP
		Web Browser: Internet Explorer 7 or higher	
	D-ViewCam™ Software Functions	Remote management/control of up to 32 cameras	Supports all management functions provided in web interface
		Viewing of up to 32 cameras on one screen	Scheduled motion triggered, or manual recording options
General	Weight	267 g +-5%	
	External Power Adaptor	Input: 100 to 240 V AC, 50/60 Hz	Output: 5 V DC, 1.2 A
	Power Consumption	3.9 watts +-5%	
	Temperature	Operating: 0 to 40 °C (32 to 104 °F)	Storage: -20 to 70 °C (-4 to 158 °F)
	Humidity	Operating: 20% to 80% non-condensing	Storage: 5% to 95% non-condensing
	Certifications	CE	FCC
		CE LVD	C-Tick

