

C58/C58P

VoIP Phone



WWW.FANVIL.COM

VoIP Phone C58/C58P Quick Installation Guide



Fanvil

Smart VoIP

This phone can be setted through the LCD or web page.
If you own this product to make some VoIP calls, an Ethernet-based Cable or a DSL modem with an active connection to the Internet are necessary.

Check Your Package Contents

These are the items included with your C58/C58P IP Phone purchase:



VoIP Phone C58/C58P



Handset



Power adaptor



Handset cord



Quick Installation Guide




Base bracket



Ethernet Cable

2 The Appearance of Product

Front view and keypad function:

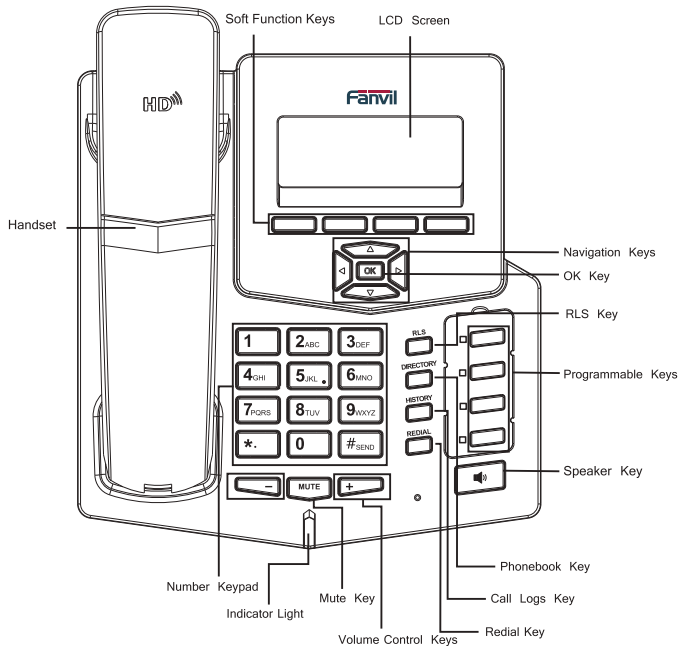


You can press these number keys one or more times to complete the corresponding input when you want do some input on the LCD.

| Key | Text Mode | | Key | Text Mode | |
|-------------------------|-------------|--------------|--------------------------|------------------------------|--------------|
| | Normal(ABC) | Numeric(0-9) | | Normal(ABC) | Numeric(0-9) |
| 1 | | 1 | 7 _{PQRS} | PQRSpqrs | 7 |
| 2 _{ABC} | ABCabc | 2 | 8 _{TUV} | TUVtuv | 8 |
| 3 _{DEF} | DEFdef | 3 | 9 _{WXYZ} | WXYZwxyz | 9 |
| 4 _{GHI} | GHIghi | 4 | 0 | | 0 |
| 5 _{JKL} | JKLjkl | 5 | *. | #@,./:;%& ()<>[]~!_ =+~? | * |
| 6 _{MNO} | MNOmno | 6 | # _{SEND} | | # |


3 Connecting IP Phone

Connect the IP Phone as shown by the following diagram:

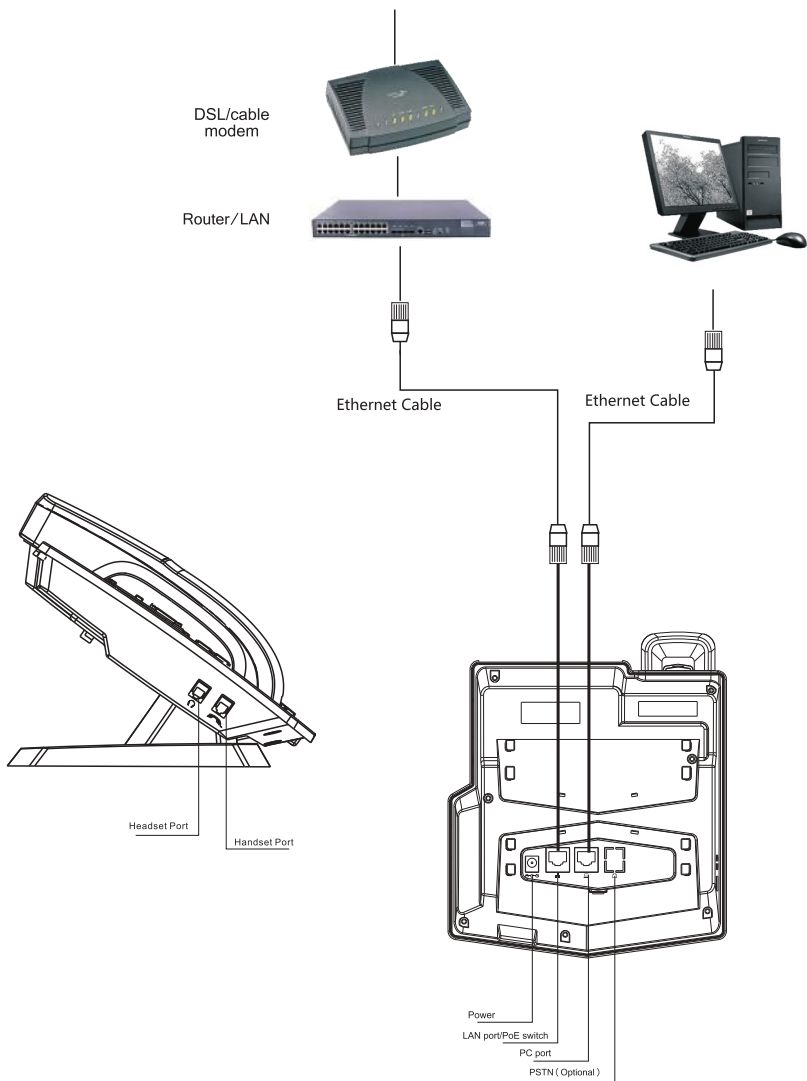


4 IP Phone Setup Menu(1)

Network mode Settings diagram:

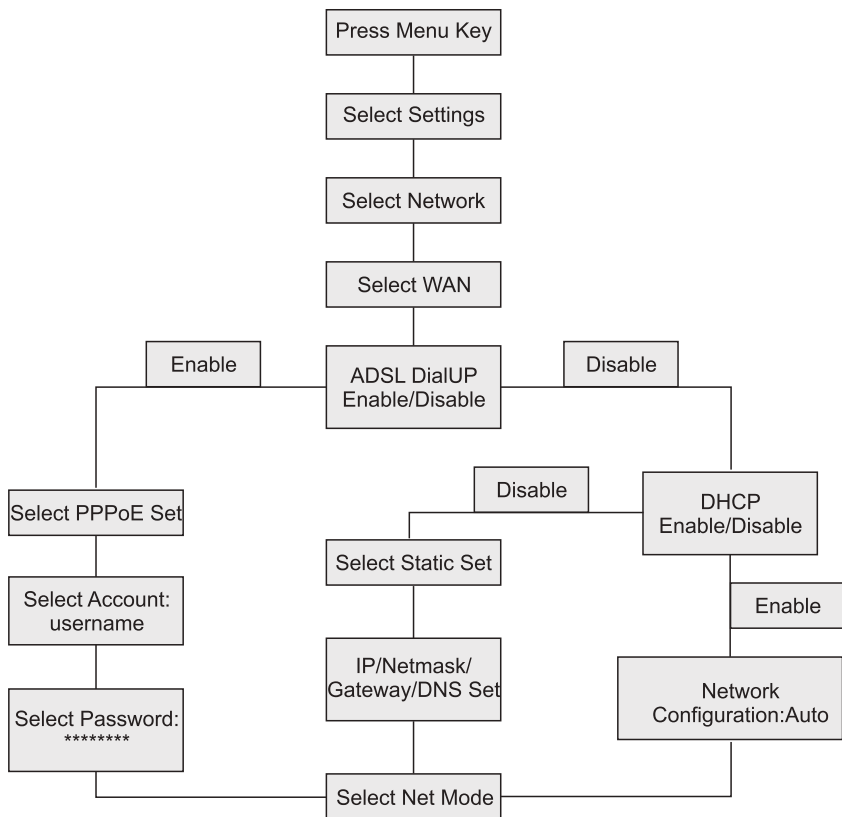

5 IP Phone Setup Menu(2)

The menu of phone Structure:

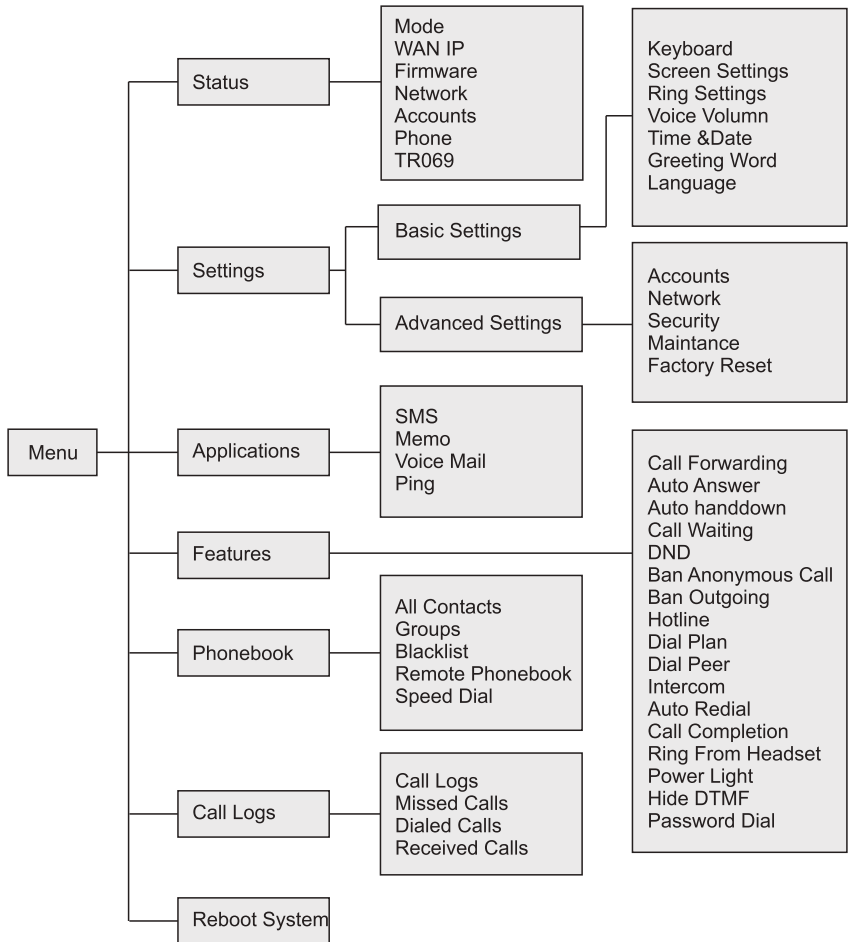

6 Configuration(1)

Web Login


The configuration menu of C58/C58P can be accessed using the convenient and user-friendly interface of a web browser.



Open the browser and type into the IP address which can be found in the status of the LCD menu(e.g. http://192.168.1.16) to visit the Web page and make some configuration.



Enter the username and password, and both of the default username and password are "admin". After your login, the Web page will be displayed as follows.

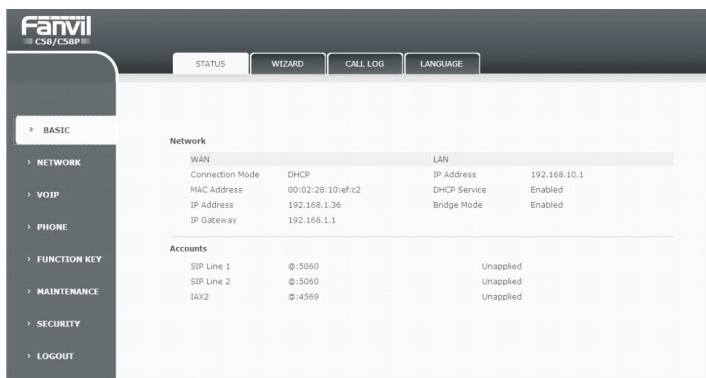

7 Configuration(2)

Network - PPPoE Setting

Select Network from the main menu.

Select PPPoE as network connection type if your ISP uses PPPoE. (Most DSL users use PPPoE.)

The screenshot shows the Fanvil web interface for configuration. The left sidebar has a menu with 'NETWORK' selected. The top navigation bar includes 'WAN', 'LAN', 'QoS/VLAN', 'SERVICE PORT', 'DHCP SERVICE', and 'TIME&DATE'. The main content area is divided into three sections: 'WAN Status', 'WAN Settings', and '802.1X Settings'. 'WAN Status' displays IP address, subnet mask, gateway, MAC address, and timestamp. 'WAN Settings' shows 'Obtain DNS Server Automatically' as 'Enabled', 'Static IP' as 'Off', and 'DHCP' as 'Off'. The 'PPPoE' radio button is selected. Fields for 'Service Name', 'User', and 'Password' are present, with 'User' set to 'user123'. An 'Apply' button is at the bottom. '802.1X Settings' shows 'User' as 'admin', 'Password' as masked, and 'Enable 802.1X' as 'Off', with another 'Apply' button.

Network - Static Setting

Select Static as network connection type if all Wide Area Network IP is provided to you by your ISP.

The screenshot shows the Fanvil web interface for configuration. The left sidebar has a menu with 'NETWORK' selected. The top navigation bar includes 'WAN', 'LAN', 'QoS/VLAN', 'SERVICE PORT', 'DHCP SERVICE', and 'TIME&DATE'. The main content area is divided into three sections: 'WAN Status', 'WAN Settings', and '802.1X Settings'. 'WAN Status' displays IP address, subnet mask, gateway, MAC address, and timestamp. 'WAN Settings' shows 'Static IP' as 'On', 'DHCP' as 'Off', and 'PPPoE' as 'Off'. Fields for 'IP Address', 'Subnet Mask', 'IP Gateway', 'DNS Domain', 'Primary DNS', and 'Secondary DNS' are present, with values like '192.168.1.179' and '255.255.255.0'. An 'Apply' button is at the bottom. '802.1X Settings' shows 'User' as 'admin', 'Password' as masked, and 'Enable 802.1X' as 'Off', with another 'Apply' button.

8 Configuration(3)

Network - DHCP Setting

Select DHCP as network connection type if your access network supports DHCP.

The screenshot shows the Fanvil C50/C50P web interface. The left sidebar contains a menu with options: BASIC, NETWORK, VOIP, PHONE, FUNCTION KEY, MAINTENANCE, SECURITY, and LOGOUT. The main content area has tabs for WAN, LAN, QoS/WLAN, SERVICE PORT, DHCP SERVICE, and TIME/DATE. The DHCP SERVICE tab is selected. Under 'WAN Status', the following information is displayed: Active IP Address (192.168.1.36), Current Subnet Mask (255.255.255.0), Current IP Gateway (192.168.1.1), MAC Address (00:02:28:10:ef:c2), and MAC Timestamp (2012-4-5). Under 'WAN Settings', there are options for 'Obtain DNS Server Automatically' (set to 'Enabled'), 'Static IP' (radio button), and 'DHCP' (radio button, selected). There is also a 'PPPoE' radio button. An 'Apply' button is present. Under '802.1X Settings', there are fields for 'User' (admin), 'Password' (masked with asterisks), and an 'Enable 802.1X' checkbox. An 'Apply' button is also present here.

SIP Settings

Select SIP settings from the main menu. The follow fields such as Server Address, Server Port, Authentication User, Authentication Password and SIP User are required. Then check Enable Registration and click Apply to register your phone to the SIP server.

The screenshot shows the Fanvil C50/C50P web interface with the 'SIP' tab selected. The left sidebar is the same as in the previous screenshot. The main content area has tabs for SIP, FAX2, STUN, and DIAL PEER. The SIP tab is selected. Under 'SIP Line', there is a dropdown menu showing 'SIP 1'. Under 'Basic Settings >>', there are several fields: Status (Registered), Server Address (192.168.1.2), Server Port (5060), Authentication User (4210), Authentication Password (masked with asterisks), SIP User (4210), Display Name, and Enable Registration (checkbox checked). There are also fields for Domain Realm, Proxy Server Address, Proxy Server Port, Proxy User, Proxy Password, Backup Server Address, Backup Server Port, and Server Name. Under 'Codescs Settings >>' and 'Advanced SIP Settings >>', there are no visible fields. An 'Apply' button is located at the bottom. At the very bottom, there is a link for 'SIP Global Settings >>'.

Server Address
Server Port
Authentication User
Authentication Password
SIP user

SIP server address
SIP server port number
Username for logging into the SIP server
Password for logging into the SIP server
SIP phone number



Make a Phone Call

IP Address:

- 1.Lift the handset or press the speaker button or headset button to enter the dialer interface.
2. Dial IP address.

For example: Input #192.168.0.1# in the dialer interface, you will call the device whose IP address is 192.168.0.1.

SIP Number:

Note: You have to register with SIP server to use SIP number.

- 1.Lift the handset or press the speaker button or headset button to enter the dialer interface.
- 2.Dial SIP number.

For example: Input 1866

- 3.Press "#" button or wait until the timer expires.

