



fitbit flex 2™



Product Manual
Version 1.0

Table of Contents

- Getting Started1**
 - What's in the box.....1
 - What's in this document1
- Putting on your Fitbit Flex 22**
 - Moving the clasp from the small to large wristband2
 - Inserting the tracker into the wristband.....2
 - Securing your wristband..... 3
- Setting up your Fitbit Flex 2..... 5**
 - Setting up your tracker on your mobile device..... 5
 - Setting up your tracker on your Windows 10 PC..... 5
 - Setting up your tracker on your Mac..... 6
 - Syncing your tracker data to your Fitbit account 6
- Getting to know your Fitbit Flex 2..... 8**
 - Wrist choice and dominant hand 8
 - Understanding the indicator lights 8
 - First-time setup 8
 - Charging..... 8
 - Updating..... 8
 - Activity goal tracking..... 9
 - Alarms 9
 - Call notifications..... 9
 - Text notifications..... 9
 - Reminders to move..... 9
 - Low battery..... 9
- Battery life and charging 9**
 - Finding your current battery level..... 9

Charging your tracker.....	10
Care	10
Automatic Tracking with Fitbit Flex 2.....	11
Tracking sleep.....	11
Tracking a daily activity goal.....	11
Choosing a goal.....	11
Seeing goal progress.....	11
Tracking exercise.....	12
Tracking hourly activity.....	12
Using Silent Alarms.....	14
Receiving Call and Text Notifications.....	15
Enabling notifications	15
Recognizing incoming notifications.....	15
Updating your Fitbit Flex 2.....	17
Troubleshooting your Fitbit Flex 2	18
Fitbit Flex 2 General Info & Specifications.....	19
Sensors.....	19
Materials	19
Wireless technology	19
Feedback	19
Battery	19
Memory.....	19
Display.....	20
Size.....	20
Environmental conditions.....	20
Learn More	20
Return policy and warranty.....	20
Regulatory & Safety Notices	21

USA: Federal Communications Commission (FCC) statement	21
Canada: Industry Canada (IC) statement.....	22
European Union (EU)	22
Australia and New Zealand.....	23
China.....	23
Mexico.....	24
Israel.....	24
Japan	25
Oman	25
Philippines	25
Serbia.....	25
Singapore.....	26
South Korea	26
Taiwan.....	26
United Arab Emirates.....	28
Safety statement.....	28

Getting Started

Welcome to Fitbit Flex 2™, the versatile activity and sleep tracker that makes fitness fashionable. Take a moment to review our complete safety information at <http://www.fitbit.com/safety>.

What's in the box

Your Fitbit Flex 2 box includes:



Tracker



Charging cable



Small & large
wristbands

Visit the [fitbit.com store](http://fitbit.com/store) to find Flex 2 accessories in other styles and colors sold separately.

What's in this document

We get you started quickly by creating a Fitbit® account and ensuring your tracker can transfer the data it collects to your Fitbit dashboard. The dashboard is where you'll set goals, analyze your historical data, identify trends, log food and water, keep up with friends, and much more. As soon as you're done setting up your tracker, you're ready to start moving.

Next, we explain how to find and use the features that interest you and adjust your preferences. To find more information, tips, and troubleshooting, please browse our comprehensive articles at <http://help.fitbit.com>.

Putting on your Fitbit Flex 2


Your Flex 2 comes with a large and a small wristband. If you want to use the large wristband you'll need to move the clasp from the small wristband.

If you need help inserting the tracker into an accessory such as a pendant, see help.fitbit.com.

Moving the clasp from the small to large wristband

If you choose to wear the large wristband, you'll need to remove the clasp from the small wristband and put it into the large wristband:


1. Push the clasp out from the inside of the wristband. You may find it helpful to first remove the square peg, followed by the round peg.
2. Pull out the clasp.
3. Insert the clasp into another wristband by lining up the square peg with the square hole and the round peg with the round hole and pressing firmly until both pegs are completely through the holes and snap into place.

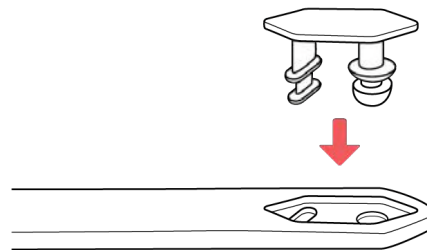

NOTE: You may need to wiggle the pegs back and forth to get them to snap into place.
If there is a bulge on the inside of the band between the two inside prongs of the clasp, find a small object like a credit card to push it flat.


Inserting the tracker into the wristband

Hold the tracker in your hand with the back of the tracker facing up. Find the dot on the back of the tracker. Insert this end into the side of the wristband that has a corresponding dot.

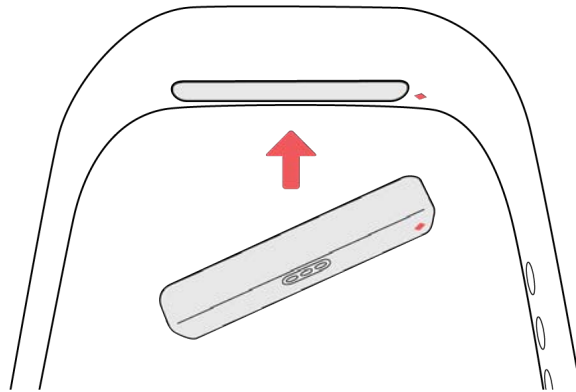


Securing your wristband


1. Put on the wristband so the colored LED light is closest to the outside of your wrist.
2. Align both ends of the wristband so they are directly overlapping each other with the clasp over the two holes that best fit your wrist.

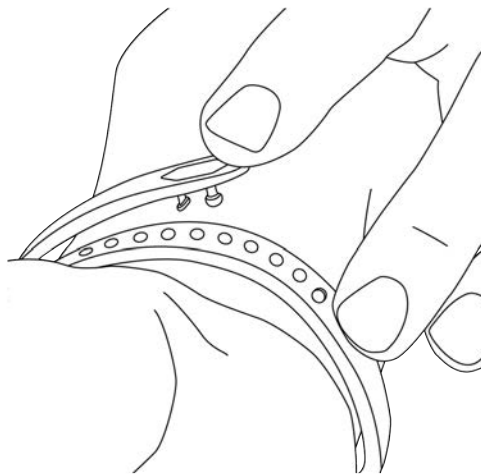

3. Squeeze both the clasp and the wristband between your thumb and forefinger until you hear a click.

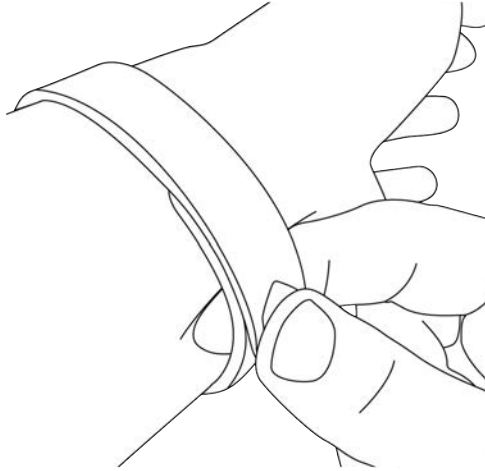

You'll know your Flex 2 wristband is securely fastened if both ends of the wristband are fully inserted.

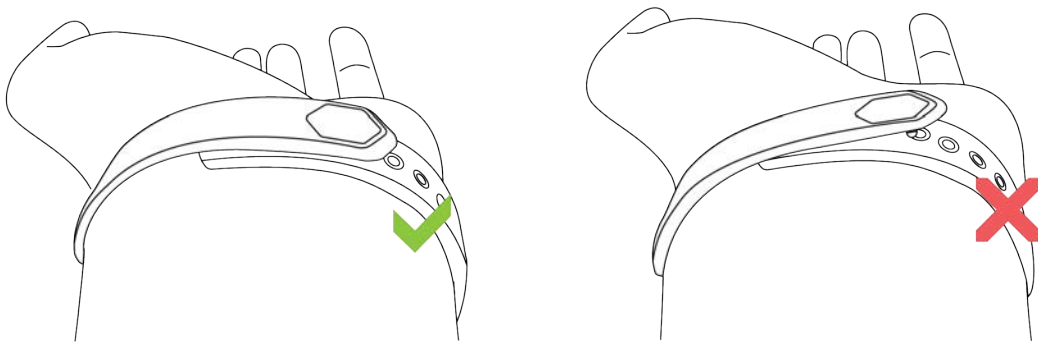

NOTE: If you're having trouble, try securing the wristband off your wrist to get a feel for how it securely clasps and then try again on your wrist.

Setting up your Fitbit Flex 2

We recommend using the Fitbit apps for iOS, Android, or Windows 10 to set up your tracker and make the most of the Fitbit experience. If you don't have a mobile device you can also use a Bluetooth®-enabled Windows 10 PC or Mac. For syncing options if you don't have mobile device or Bluetooth-enabled Windows 10 PC or Mac, see help.fitbit.com

While creating a Fitbit account you'll be asked for personal information such as height, weight, and gender. We use your answers for various calculations, such as stride lengths to estimate distance and basal metabolic rate to estimate calorie burn. You have the option to share your age, height, or weight with Fitbit friends but the information you provide is private by default.

Setting up your tracker on your mobile device

The free Fitbit app is compatible with more than 200 mobile devices that support iOS, Android, and Windows 10 operating systems.

To get started:

1. Make sure the Fitbit app is compatible with your mobile device by checking <http://www.fitbit.com/devices>.
2. Find the Fitbit app in one of these locations, depending on your device:
 - The Apple® App Store® for iOS devices such as an iPhone® or iPad®.
 - The Google Play™ Store for Android devices such as the Samsung® Galaxy® S5 and Motorola Droid Turbo.
 - The Microsoft® Windows Store for Windows 10 mobile devices such as the Lumia™ phone or Surface™ tablet.
3. Install the app. Note that if you don't have an account with the store you'll be required to create one before you can download the app.
4. When the app is installed, open it and tap **Join Fitbit** to be guided through a series of questions that help you create your Fitbit account, or login to your existing account.
5. Continue following the onscreen instructions to connect, or *pair*, your Flex 2 to your mobile device. Pairing makes sure the tracker and mobile device can communicate with one another (sync data back and forth).

When you're done pairing, read through the guide about your new tracker and then explore the Fitbit dashboard.

Setting up your tracker on your Windows 10 PC

If you don't have a mobile device, you can set up and sync your tracker using a Bluetooth-enabled Windows 10 PC. The same Fitbit app that is available for Windows 10 mobile devices is available for your computer.

To get the Fitbit app for your computer:

Click the Start button on your PC and open the Windows Store (called Store).

1. Search for “Fitbit app” and when you find it click **Free** to download the app to your computer.
2. If you’ve never downloaded an app to your computer you’ll be prompted to create an account with the Windows Store.
3. Click **Microsoft account** to sign in with your existing Microsoft account. If you don’t already have an account with Microsoft, follow the onscreen instructions to create a new account.
4. Open the app after it’s done downloading.
5. Click Join Fitbit to be guided through a series of questions that help you create a Fitbit account, or login to your existing account.
6. Continue following the onscreen instructions to connect, or *pair*, your Flex 2 with the Windows 10 app. Pairing makes sure the tracker and app can communicate with one another (sync data back and forth).

When you’re done pairing, read through the guide about your new tracker and then explore the Fitbit dashboard.

Setting up your tracker on your Mac

If you don’t have a compatible mobile device, you can set up your tracker with a Bluetooth-enabled Mac and use the fitbit.com dashboard to see your stats. To use this method you’ll first install a free software application called Fitbit Connect that lets Flex 2 sync its data with your fitbit.com dashboard.

To install Fitbit Connect and set up your tracker:

1. Go to <http://www.fitbit.com/setup>.
2. Scroll down and click the option to download. If the button does not correctly show your type of computer (for example, if it says “Download for Mac”), choose the correct type, then click the button.
3. You’ll see an option to open or save a file; choose open. After several seconds you’ll see an option to install Fitbit Connect.



4. Double-click Install Fitbit Connect.pkg. The Fitbit Connect installer opens.
5. Click **Continue** to move through the installer.
6. When prompted, choose **Set up a New Fitbit Device**.
7. Follow the onscreen instructions to create a Fitbit account, or login to your existing account, and connect your tracker with Fitbit Connect.

When you’re done with the setup steps, Fitbit guides you through an introduction to your new Flex 2 and then takes you to the fitbit.com dashboard.

Syncing your tracker data to your Fitbit account

When you start using your Flex 2 you’ll need to regularly sync it with your Fitbit dashboard. The dashboard is where you’ll track progress, see your exercise history,

track your sleep patterns, participate in challenges, and much more. We recommend syncing at least once a day.

The Fitbit apps and Fitbit Connect use Bluetooth Low Energy (BLE) technology to sync with your Fitbit tracker.

Each time you open the Fitbit app it syncs automatically if the paired tracker is nearby. You can also use the [Sync Now](#) option in the app at any time.

Fitbit Connect syncs every 15 minutes if the tracker is within 20 feet of the computer. To force a sync, click the Fitbit Connect icon located near the date and time on your computer and choose [Sync Now](#).

Getting to know your Fitbit Flex 2

This section tells you how best to wear, navigate, and recharge your tracker.

Wrist choice and dominant hand

For greater accuracy, your tracker needs to know which wrist you wear it on (dominant or non-dominant). Your dominant hand is the one you usually write or throw with.

By default, your tracker is setup to be worn on your non-dominant wrist. Should you later decide to move your tracker to the other wrist, change the Wrist setting in the Account section of the Fitbit app or in the Personal Info section of your fitbit.com dashboard settings.

Understanding the indicator lights

Your Flex 2 has five indicator lights that flash various patterns depending on what the tracker is doing. One light changes color while the other four are always white.

First-time setup

The first time you put your tracker in the charger before you set it up (pair), your Flex 2 will flash and vibrate to greet you. The top light changes color several times before flashing blue continuously.

When you put the tracker in the wristband and begin the pairing process, all five lights flash in a looping pattern until you're prompted to double tap the tracker. When pairing is done, all five lights blink twice and you'll feel two short vibrations.

Charging

While Flex 2 is charging, each pulsing indicator light represents progress towards the total charge in increments of 25%. When Flex 2 is completely charged, a green light flashes and then all five lights shine for a few seconds before turning off.

Updating

We occasionally make free feature enhancements and product improvements available through firmware updates. During an update, all five lights on Flex 2 flash in an upward pattern. If an update can't finish, you'll see your progress toward today's goal and receive an alert in the Fitbit app.

Activity goal tracking

Tap your Flex 2 to see your progress towards your daily activity goal. Each solid white light represents 25% of your goal, meaning for example that if your goal is 10,000 steps and you see four white lights, you've gone at least 7500 steps. When you reach your goal Flex 2 vibrates and the lights flash in celebration. After you reach your goal and you check your goal progress you'll see a flashing green light and four white lights

Alarms

Flex 2 vibrates to wake you if you set a silent alarm. You'll also see a yellow light and three white lights for 30 seconds or until you dismiss the alarm.

Call notifications

If you have call notifications enabled and you receive a phone call with your phone nearby, Flex 2 vibrates two times and you'll see a pattern of one blue light and four white lights repeated four times, or until you answer the call or double tap Flex 2 to dismiss the notification.

Text notifications

If you have text notifications enabled and you receive a text message with your phone nearby, Flex 2 vibrates once and you'll see a blue light and one white light.

Reminders to move

When you receive a reminder to move Flex 2 vibrates twice and you'll see a magenta light and two white lights. When you meet the 250-step goal after receiving a reminder, you'll feel a second vibration and see a celebratory light pattern.

Low battery

When your tracker is in a low battery state, usually when you have about a day of battery life remaining, you'll see a flashing red light after you see your goal progress.

Battery life and charging

Your fully charged Flex 2 has a battery life of up to five days. Battery life and charge cycles vary with use and other factors; actual results will vary.

Finding your current battery level


If your battery is low, when you check your goal progress on your Flex 2, you'll see a flashing red light after you see your goal progress.

You can also check your battery level on your Fitbit dashboard.

Charging your tracker

To charge your tracker:

1. Plug the charging cable into the USB port on your computer or a UL-certified USB wall charger.
2. Press the tracker into the compartment on the charging cable. The pins on the charging cable must align with the corresponding pins on the back of the tracker and lock securely in place. You'll know the connection is secure when the tracker vibrates and you see the indicator lights blinking, indicating your progress towards a total charge.

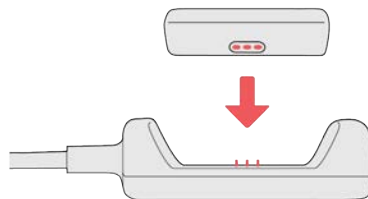

Charging fully takes about two to three hours. While the tracker charges, each white light that turns on represents 25% of the maximum charge. When Flex 2 has charged completely, you'll see a green light and then all five lights will shine for a few seconds before turning off.

If you don't see any lights flashing, you can double-tap your tracker to check the charging progress. You'll know your tracker is fully charged when you see one green and four white indicator lights.

Care

It's important to clean and dry your Flex 2 regularly. For instructions and more information see <http://www.fitbit.com/productcare>. Always remember to keep it clean; keep it dry; don't wear it too tight; and give your wrist a rest.

Even though Fitbit Flex 2 is swim-proof, it's important to thoroughly dry your classic elastomer band and tracker, and remove any debris from your device after wear in the water, to avoid skin irritation. Please note that pendant and bangle accessories should not be worn in water.

Automatic Tracking with Fitbit Flex 2

Flex 2 continuously tracks your steps, distance, calories burned, and active minutes whenever you wear it. Sync your tracker and check your dashboard to see those stats and all the stats described below.

Note: Flex 2 resets at midnight to begin a new day.

Tracking sleep

Wear your Flex 2 to bed to automatically track both your time spent asleep and your sleep quality. To see your sleep information, sync your tracker when you wake up and check your dashboard.

Your Fitbit dashboard can recommend consistent bedtimes and wake times to help you improve your sleep cycle. You can even choose to be reminded nightly when it's time to start winding down for bed.

Note: Automatic sleep tracking may be disabled when using the pendant accessory. Do not wear the Flex 2 pendant accessory while sleeping; classic accessory bands are the recommended accessory for sleep tracking.

Tracking a daily activity goal


Your Flex 2 tracks your progress towards a daily activity goal of your choice. When you reach your goal, the tracker vibrates and flashes in celebration.

Choosing a goal

By default your goal is 10,000 steps per day. You can change the goal to distance traveled, calories burned, or active minutes and select the corresponding value you prefer. For example, you may want to keep steps as your goal but change the target from 10,000 to 20,000 steps.

Seeing goal progress

Tap Flex 2 twice to see your progress towards your goal.

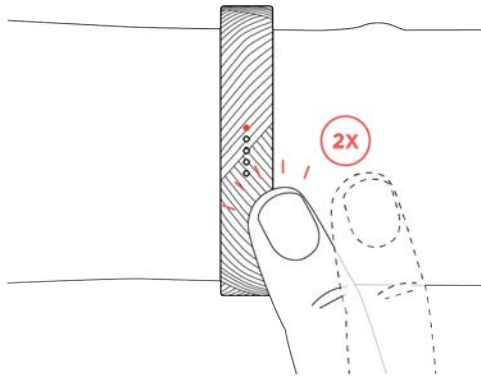

Each white light represents 25% of your total goal. A blinking light shows the current segment of the goal you're working on.

Tracking exercise

The SmartTrack™ feature on Flex 2 automatically tracks walking, running, cycling, aerobic exercises, and more. When you sync Flex 2 after a workout you'll find your results in the exercise history section of your Fitbit dashboard.

By default, SmartTrack detects continuous movement at least 15 minutes in length. You can increase or decrease the minimum duration or disable SmartTrack for one or more exercise types. For more information about customizing and using SmartTrack, see help.fitbit.com.


Note: Certain features like automatic sleep tracking and SmartTrack may be disabled when using the necklace accessory. Do not wear the Flex 2 necklace accessory while sleeping or during high-intensity activity. Classic accessory bands are the recommended accessory for high-intensity workouts and sleep tracking. Please note that non-elastomer accessories should not be worn in water.

Tracking hourly activity

Flex 2 helps keep you active throughout the day by keeping track of when you're stationary and reminding you to move.

If you haven't walked at least 250 steps in a given hour, at ten minutes before the hour you'll feel a vibration and see a light pattern reminding you to walk. When you meet the 250-step goal after receiving a reminder, you'll feel a second vibration and see a celebratory light pattern.

For more information about reminders to move, including information on how to turn them on, see help.fitbit.com.

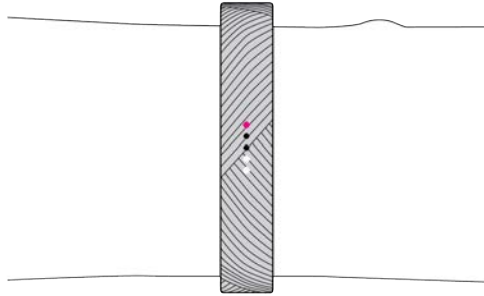

Reminder to move light pattern

Using Silent Alarms

Flex 2 can gently vibrate to wake or alert you with a silent alarm. You can set up to eight alarms to recur every day or on particular days of the week only. When the alarm goes off, simply double tap to dismiss.

For more information about customizing and using silent alarms, see help.fitbit.com.

Receiving Call and Text Notifications

Over 200 compatible iOS and Android mobile devices let you receive incoming phone call and text message notifications on your Flex 2 when your mobile device is nearby. To determine whether your device supports this feature, go to <http://www.fitbit.com/devices>. Note that notifications aren't available with the Fitbit app for Windows 10.

Enabling notifications

Before you turn on notifications in the Fitbit app, make sure that Bluetooth is on and that your mobile device is capable of sending notifications (often under Settings > Notifications).

For more information about making sure your mobile device permits notifications, see help.fitbit.com.

To turn on call or text notifications:

1. With your tracker nearby, tap **Account** on the Fitbit dashboard.
2. Tap the Flex 2 tile.
3. Tap **Notifications** and turn on or off any combination of call or text notifications.
4. Follow the onscreen instructions to connect (bond) your mobile device with your tracker.


After notifications are enabled, "Flex 2" appears in the list of Bluetooth devices paired to your mobile device.

Note: If this is your first time setting up notifications on your Android mobile device, for detailed instructions, see help.fitbit.com

Recognizing incoming notifications


If your tracker and mobile device are within 30 feet of each other, a call or text message causes the tracker to show a light pattern and vibrate.

For phone calls, Flex 2 vibrates two times or until you answer the call or double tap your tracker. While the phone is ringing you'll see a blue light and four white lights, repeated up to four times.

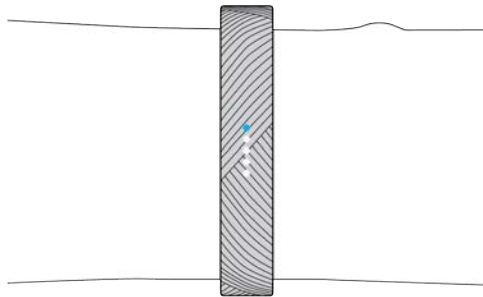

Call notification light pattern

For text messages Flex 2 vibrates once and repeats three times the light pattern of one blue light and one white light. To dismiss the notification double-tap your tracker.

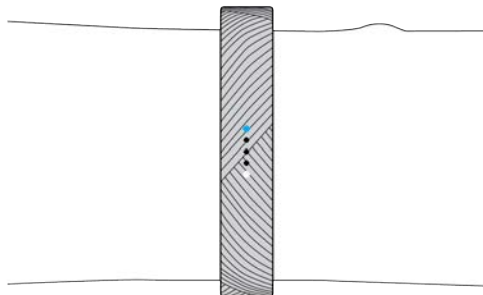

Text notification light pattern

Updating your Fitbit Flex 2

We occasionally make free feature enhancements and product improvements available through firmware updates. We recommend keeping your Flex 2 up to date.

When a firmware update is available you'll see a notification in the Fitbit app prompting you to update. When the update starts, the lights on Flex 2 flash and a progress bar appears in the app. You'll see a confirmation message in the app when the update is done.

Note: Updating your Flex 2 takes several minutes and may be demanding on the battery. For this reason we recommend updating while your tracker is fully charged or plugged into the charging cable.

Troubleshooting your Fitbit Flex 2


If you experience one of the following problems, it may be fixed by restarting your tracker:

- Not syncing despite successful setup
- Not responding to taps despite being charged
- Not tracking your steps or other data

Note: Restarting your tracker reboots the device but does not delete any data.

To restart your tracker:

1. Plug the charging cable into the USB port on your computer or a UL-certified USB wall charger.
2. Remove the tracker from the wristband and press the tracker into the compartment on the charging cable. The pins on the charging cable must align with the corresponding pins on the back of the tracker and lock securely in place. You'll know the connection is secure when the tracker vibrates and you see the indicator lights blinking, indicating your progress towards a total charge. Your Flex 2 will begin charging.

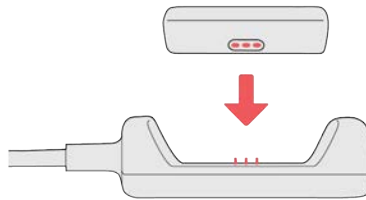

3. Find the button on the charging cable and press it three times within five seconds. The button is under the tracker compartment.

The tracker vibrates each time you press the button. After the third button press, wait for about five seconds for all the lights to flash at once, this means the tracker has restarted.

Note that the light flash happens quickly and you may not notice it. Your tracker resumes charging after a restart and you will see the normal blinking of the indicator lights indicating your progress towards a total charge.

After your tracker restarts you can unplug it from the charging cable and put it back on. For additional troubleshooting or to contact Customer Support, see help.fitbit.com.

Fitbit Flex 2 General Info & Specifications

Sensors

Your Fitbit Flex 2 contains a MEMS 3-axis accelerometer, which tracks your motion patterns.

Materials

The wristband that comes with Flex 2 is made of a flexible, durable elastomer material similar to that used in many sports watches. It does not contain latex.

The clasp that comes with Flex 2 is made of surgical-grade stainless steel. While all stainless steel contains traces of nickel and can cause an allergic reaction in someone with nickel sensitivity, the amount of nickel in all Fitbit products meets the European Union's stringent Nickel Directive.

Fitbit accessory bangles, bands and, pendants sold separately are available in durable elastomer and stainless steel.

Wireless technology

Flex 2 contains a Bluetooth 4.0 radio transceiver.

Feedback

Flex 2 contains a vibration motor, which allows the tracker to vibrate with alarms, goals, and notifications.

Battery

Flex 2 contains a rechargeable lithium-polymer battery.

Memory

Flex 2 stores most minute-by-minute stats and SmartTrack data for seven days. It stores summary totals for 30 days. Stored data consists of steps, distance, calories burned, active minutes, exercise, sleep, and stationary vs. active hours. We recommend syncing your tracker at least once a day.

Display

The Flex 2 has an LED tap display.

Size

The small wristband sold with Flex 2 fits a wrist between 5.5 and 6.7 inches in circumference.

The large wristband sold with Flex 2 fits a wrist between 6.7 and 8.1 inches in circumference.

Accessories sold separately may vary in size.

Environmental conditions

Operating Temperature	14° to 113° F (-10° to 45° C)
Non-operating Temperature	-4° to 95° F (-20° to 35° C)
Water Resistant	Swim proof up to 50m.
Maximum Operating Altitude	30,000 feet (10,000 m)

Learn More

To learn more about your tracker and dashboard visit <http://help.fitbit.com>.

Return policy and warranty

Warranty information and the fitbit.com return policy can be found at <http://www.fitbit.com/returns>.

Regulatory & Safety Notices

Model Name: FB403

USA: Federal Communications Commission (FCC) statement

Notice to the User: The FCC and Industry Canada IDs can also be viewed on your device. To view content:

- **While your tracker is charging, press the button to scroll to the Regulatory screen.**

This device complies with FCC part 15 FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation

FCC Warning

Changes or modifications not approved by Fitbit, Inc. could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device meets the FCC requirements for RF exposure in public or uncontrolled environments.

FCC ID: XRAFB403

Canada: Industry Canada (IC) statement

This device meets the IC requirements for RF exposure in public or uncontrolled environments.

Cet appareil est conforme aux conditions de la IC en matière de RF dans des environnements publics ou incontrôlée

IC Notice to Users in accordance with the current RSS GEN:

This device complies with Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device

Cet appareil est conforme avec Industrie Canada RSS standard exempts de licence (s). Son utilisation est soumise à Les deux conditions suivantes:

1. Cet appareil ne peut pas provoquer d'interférences et
2. Cet appareil doit accepter Toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement du dispositif

IC: 8542A-FB403

European Union (EU)

Simplified Declaration of Conformity with regard to Directive 1999/5/EC:

Fitbit Inc. hereby declares that the Fitbit Flex 2 (Model FB403) complies with the fundamental requirements and the other relevant provisions of Directive 1999/5/EC. The CE Declaration of Conformity for this product can be found at <http://www.fitbit.com/safety>.

Déclaration simplifiée de conformité relative à la directive 1999/5/CE:

Fitbit Inc. déclare par la présente que le Fitbit Flex 2 (modèle FB403) est en conformité avec les exigences essentielles et autres dispositions pertinentes de la directive 1999/5/CE. La déclaration CE de conformité de ce produit est disponible à l'adresse suivante www.fitbit.com/safety.

Dichiarazione semplificata di conformità alla direttiva UE 1999/5/CE:

Fitbit Inc. dichiara che Flex 2 (modello FB403) è conforme ai requisiti fondamentali e alle disposizioni applicabili della Direttiva 1999/5/CE. La Dichiarazione di Conformità CE per questo prodotto è disponibile all'indirizzo www.fitbit.com/safety.

Vereinfachte Konformitätserklärung bezüglich der Richtlinie 1999/5/CE:

Hiermit erklärt Fitbit Inc., dass sich das Gerät Fitbit Flex 2 (Modellreihe: FB403) in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/CE befindet. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: www.fitbit.com/safety.

Declaración simplificada de conformidad de acuerdo con la Directiva 1999/5/CE:

Fitbit Inc. declara así que el Fitbit Flex 2 (modelo FB403) cumple con los requisitos fundamentales y demás disposiciones pertinentes de la Directiva 1999/5/CE. La declaración de conformidad de la CE de este producto puede encontrarse en www.fitbit.com/safety.



Australia and New Zealand



R-NZ

China



部件名称	有毒和危险品					
	铅 (Pb)	水银 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴化苯 (PBB)	多溴化二苯醚 (PBDE)
Flex 2 Model FB403						
表带和表扣	○	○	○	○	○	○
电子	X	○	○	○	○	○
电池	○	○	○	○	○	○
充电线	X	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制

O: 表示该项目中涉及的所有物料, 其包含的有害物质的含量低于 GB/T 26572. 标准的限制要求.

X: 表示该项目中涉及的所有物料中至少有一种, 其包含的有害物质的含量高于 GB/T 26572. 标准的限制要求.

Mexico



IFETEL: RCPFIFB16-1170

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. Es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada

Israel

אישור התאמה 51-56210

אי לבצע כל שינוי טכני בחלק המודולארי של המוצר.

Japan



Oman

OMAN-TRA/TA-R/3485/16
D090258

Philippines



Serbia



И 005 16

Singapore

Complies with IDA
Standards
DA00006A

South Korea

클래스 (장치가 정해진 용을 위한 송신기)가 MC(등록 로정용 B급)으로 하고, 모든 지역에서 사용할 수 있습니다.
인을 이항치. 수.

“ 해당 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다. ”



- 사용 주파수 (Used-frequency): 2402 MHz - 2480 MHz

- 채널 수 (The number of channels): 40

- 송신 전계 강도 (Antenna power): 2.0 dBm

- 변조 방식 (Type of the modulation): FSK

- 안테나 타입 (Antenna type): Integral

- 출력 (Output power): 0.611 mW/MHz EIRP

- 안테나 종류 (Type of Antenna): Integral

KCC approval information

1) Equipment name (model name) : 무선데이터 통신시스템용 정소출력 무선기 B403

2) Certificate number : MSIP-CMM-XRA-FB403

 
3) Applicant : Fitbit, Inc.

4) Manufacturer: Fitbit, Inc.

5) Manufacturer Country of origin: R.C.

Taiwan

Fitbit Model FB403



注意！

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Article 12

Without permission, any company, firm or user shall not alter the frequency, increase the power, or change the characteristics and functions of the original design of the certified lower power frequency electric machinery.

Article 14

The application of low power frequency electric machineries shall not affect the navigation safety nor interfere a legal communication, if an interference is found, the service will be suspended until improvement is made and the interference no longer exists. The foregoing legal communication refers to the wireless telecommunication operated according to the telecommunications laws and regulations. The low power frequency electric machinery should be able to tolerate the interference of the electric wave radiation electric machineries and equipment for legal communications or industrial and scientific applications

United Arab Emirates

TRA Registered No.: ER47954/16
Dealer No.: DA35294/14

Safety statement

This equipment has been tested to comply with safety certification in accordance with the specifications of EN Standard: EN60950-1:2006 + A11:2009 + A1:2010 + A12: 2011 + A2:2013.

©2017 Fitbit, Inc. All rights reserved. Fitbit and the Fitbit logo are trademarks or registered trademarks of Fitbit in the US and other countries. A more complete list of Fitbit trademarks can be found at <http://www.fitbit.com/legal/trademark-list>. Third-party trademarks mentioned are the property of their respective owners.