

Quirky + 



## PIVOT POWER® GENIUS

control power to anything from anywhere

### OVERVIEW

Part of the Quirky + GE collection of smart products, Pivot Power Genius is a flexible, app-enabled power strip.

Smart outlets allow you to turn anything that's plugged in on or off from anywhere using your mobile device.

## FEATURES

- 1 Four adjustable AC outlets
- 2 Independently control two smart outlets from your mobile device
- 3 Program and schedule when you want the two smart outlets to turn on and off
- 4 Instantly connects to your mobile device over any Wi-Fi® network

## WHAT'S INCLUDED (in the box)

- 1 Pivot Power Genius
- 2 Quick Start Card

## REQUIRED FOR USE (not included in box)

- 1 Wi-Fi®
- 2 Mobile device
- 3 Wink app



## GETTING STARTED

- 1 Download and install the Wink app on your mobile device as outlined in the Quick Start Card. The app will enable a Wi-Fi® connection between your mobile device and Pivot Power Genius.
- 2 Plug Pivot Power Genius into a grounded wall outlet and press the power button to turn it ON. When the power strip is ON, the indicator light will glow. DO NOT plug devices into any of the outlets at this time.

When the power strip is ON, the two regular outlets are always ON. The two smart outlets are defaulted to ON, but can be controlled with the Wink app.

- 3 Open the Wink app. Follow the app's instructions to connect to your Pivot Power Genius.

Your mobile device connects by sending light pulses into a sensor on your Pivot Power Genius. It is best to do this in a dimly lit environment.

- 4 Once you've connected, you can plug devices into Pivot Power Genius

*Note: DO NOT OVERLOAD the power strip. ONLY connect the device to a grounded outlet. DO NOT connect to an ungrounded outlet. DO NOT extend or daisy chain with other power strips or adapters.*

## USING PIVOT POWER GENIUS

You can use Pivot Power Genius to:

- 1 Adjust and rotate each outlet to fit designated areas and/or large plugs and power adapters.
- 2 Turn ALL outlets ON or OFF using the main power button.

- 3 Control both smart outlets:

By manually turning each outlet's switch ON/OFF from your Wink App or using the buttons on the side of the power strip.

By creating a power ON/OFF timer via the Wink app. Use it to set notifications for Wi-Fi® or power status.

*Note: LEDs next to each smart outlet indicate whether that outlet is ON or OFF.*



ON/OFF button for each outlet located on the side of the power strip.

## TROUBLESHOOTING

If the Wi-Fi® connection has been lost, any scheduled timers may not execute depending on the outage time. Reconnect the Wi-Fi® network.

If the Wink app has lost control of the smart outlets, it may be that Pivot Power Genius has lost its connection to the Wi-Fi® network. Try turning the power strip OFF then ON again to restore its connection.

If you experience a power outage, power will cease to ALL outlets and the Wink app connection will be lost. When power is restored, check the main power button to ensure the power strip is ON to regain connection.

If you can't control the smart outlets from a different mobile device, ensure you are using the same account information within the app.

If you do not get push notifications on your mobile device from the Wink app as you have specified in the app, please check that notifications are turned on for Wink app in your mobile device's notification settings.

**Questions?** For service and support or tutorials, email us at [questions@quirky](mailto:questions@quirky) or call 1-866-5QUIRKY.

## IMPORTANT SAFETY INSTRUCTIONS / WARNINGS



### CAUTION

To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

### WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

### WARNING

Timer could turn-on unexpectedly without the user being present. To Reduce the Hazardous Condition - unplug the appliance that is plugged into the receptacle(s) controlled by the timer before servicing.

### CAUTION

This unit must be connected to an outlet with a protective grounded connection.

### CAUTION

To completely disconnect this product from power, disconnect the plug from the wall outlet. The plug is used to completely disconnect the power supply to the unit and must be within easy access to the user.

### CAUTION

To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

### CAUTION

Wink devices connect by receiving flashing light patterns that come from your phone's screen. Please note that a very small percentage of individuals may experience epileptic seizures when exposed to such light patterns or flashing lights. If you have an epileptic condition, consult your physician prior to using this app to connect a device.

## IMPORTANT SAFETY INSTRUCTIONS

- 1 Read Instructions**—All safety and operating instructions should be read before operating the device.
- 2 Heed Warnings**—All warnings on the device and in the operating instructions should be adhered to.
- 3 Follow Instructions**—All operating and safety instructions should be followed.
- 4 Water & Moisture**—The device should never be used in, on or near water for risk of electric shock.
- 5 Ventilation**—The device should always be located in such a way that it maintains proper ventilation.
- 6 Heat**—Never locate the device near heat sources such as radiators, floor registers, stoves or other heat-generating devices.
- 7 Grounding**—DESIGNED FOR INDOOR USE ONLY! The device should ONLY be connected to a grounded outlet. DO NOT connect product to an ungrounded outlet.
- 8 CAUTION:** Risk of Electric Shock. Do not plug into other Relocatable Power Taps.
- 9 Power Cord Protection**—Power cables should be routed so they are not likely to be stepped on or crushed by items placed on them or against them. Special attention should be paid to areas where the plug enters a socket and where the cord exits the device.
- 10 Cleaning**—Clean product with a damp soft cloth. DO NOT submerge Pivot Power Genius in water.
- 11 Periods Of Non-Use**—Make sure to unplug Pivot Power Genius when it is not expected to be used for several months.
- 12 Dangerous Entry**—Care should be taken that no foreign objects or liquids fall or are spilled on or inside the device.
- 13 Damage Requiring Service**—The device should be serviced by licensed technicians when:
  - The internal electronic components have been damaged.
  - Objects have fallen or liquid spilled inside of the device.
  - The device has been exposed to moisture.
  - The device does not appear to be operating properly or exhibits a marked change in performance.
  - The device has been dropped or becomes damaged.
- 14 Service**—The device should always be serviced by licensed technicians. Only replacement parts specified by the manufacturer should be used. The use of unauthorized substitutions may result in fire, shock, or other hazards.
- 15 When servicing:** Unplug any appliance that is plugged into the power strip before servicing.
- 16 Caution**—Do not install this device if there is not at least 10 meters (30 feet) or more of wire between the electrical outlet and the electrical service panel.
- 17 Pivot Power Genius** features an internal protection that will disconnect the surge protective component but will maintain power to the load - now unprotected. If this situation is undesirable for the application, follow the manufacturer's instructions for replacing this device.



**18 Wi-Fi®** controlled receptacles are not to be used with heater type devices (irons, space heaters, coffee makers), medical equipment and other types of devices that could pose a safety concern if the receptacle inadvertently turns ON or OFF.

**19 High power devices** such as air conditioners, refrigerators and power tools should not be plugged into a surge protected power strip like Pivot Power Genius. Such devices are a common source of surges when they are turned on and off. Exposing the surge protector to additional surge events will accelerate wear and tear on the surge protection feature and degrade it's performance.

### A NOTE ABOUT RECYCLING:

This product and its packaging materials are recyclable. Please dispose of any materials in accordance with the local recycling regulations. When discarding the unit, comply with local rules or regulations. This product and the supplied accessories constitute the applicable product according to the WEEE directive.

### MODIFICATIONS DISCLAIMER WARNING!!!

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

*Note: The manufacturer is not responsible for any Radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.*

### FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any

interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Quirky could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

### RF EXPOSURE STATEMENT

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum 20cm distance between the product and your body. Use only the supplied antenna.

### QUIRKY ORIGINAL PURCHASE PRODUCT WARRANTY

Quirky, Inc. ("Quirky") warrants to the original purchaser ("Purchaser") of this Quirky product, for the period of one (1) year following the date on which Purchaser purchases the product, that the product shall be free of defects in design, assembly, material, or workmanship.

Quirky will repair or replace, at its option, any defective product free of charge.

In order to qualify for this warranty, the Purchaser must provide the defective product and a copy of the original receipt of purchase, to Quirky for inspection.

The receipt of purchase must indicate the product purchased, price paid, date of purchase, and name of merchant.

Alternatively, at the Purchaser's election, but subject to Quirky's approval, the Purchaser may obtain replacement parts from Quirky, free of charge. To obtain replacements parts, the Purchaser must provide the product serial number to Quirky in connection with any request for replacement parts.

To request service under this warranty, contact Quirky at 866-5-QUIRKY or [questions@quirky.com](mailto:questions@quirky.com), and a Quirky representative will provide instruction on how to proceed.

This warranty shall be null and void if Quirky determines that the product has been improperly installed, altered or tampered with any way. This warranty does not protect against normal-use wear and tear or damage due to abuse.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF QUIRKY. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL QUIRKY BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY QUIRKY PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some jurisdictions do not allow exclusions or limitations on implied warranties or incidental, consequential or other damages, so the above exclusions and limitations may not apply to you.

## COPYRIGHT NOTICE

Copyright 2013 Quirky Incorporated

No part of this manual may be reproduced or modified without written consent from Quirky Incorporated.

Quirky Incorporated is not liable or responsible for any operational, or technical errors or omissions made in this manual.

Quirky and Pivot Power are registered trademarks of Quirky Incorporated.

Wi-Fi® is a registered trademark of the Wi-Fi Alliance.

## HOW TO OBTAIN SERVICE

Need help? We are available

weekdays: 9AM - 9PM EST

weekends: 12PM - 6PM EST

Email: [questions@quirky.com](mailto:questions@quirky.com)

Call: 1-866-5QUIRKY

