

Mini Wireless
Keyboard Touchpad Combo
Rii Mini RT-MWK08
[2.4GHz]
(Rii mini i8)
Ver: 2.2*

Installation & User Manual

*Reviewed by DP from HQ-Tech

Safety Precautions

Safety Matters

To avoid injury, death of personnel or damage to the equipment the operator must refer to the explanations in this User's Manual.

Battery: There is a lithium-ion rechargeable battery in this device. Don't water this device, or put it in a humid environment for a long time or the device will be damaged.



Attention to traffic safety

(CAR PC): Do not use the device while driving. When you want to use it, please park your car.



Turn off this device on planes

This Electronic wireless product can disturb the communications systems of airplanes. Please turn it off before boarding.



In vicinity of dangerous goods to be shut down

In gas station and close to fuel and chemical agents and other hazardous materials areas, please turn the device off.

**Turn off this device in hospital**

Please turn the device off in areas with “no wireless device” indication.

Wireless devices may interfere with implanted cardiac pacemakers, hearing aids and other medical implant devices.

**Interference**

All wireless devices may be subject to interference, thus affecting the performance of this product.

**Accessories**

Only use factory specified parts. Please use the supplied travel charging cable. The use of other charging devices may be dangerous.



Do not point the laser beam on human or animal eyes directly to avoid damage to the eye.

Overview

Thank you for purchasing the Wireless Mini QWERTY Keyboard & Touchpad Combo. You can use it for emails, chat, or to enjoy your favorite games. It is compatible with PC, pad, HTPC, Smart TV, TV BOX running Android systems. It also supports Xbox360 and Sony Playstation3. Use it with your HTPC on your Sofa or browse the internet in the most comfortable fashion.

This mini keyboard ideal for the lecture, sales manager, presenter, from within a 10m radius make a presentation and operate PC remotely. You can change slides and screen options, write on the screen, emphasize words and objects just by using this wireless Mini Keyboard and Mouse with Touch Pad.

Rii mini keyboard is best choice for people who want to watch internet TV, play on their standard TV, via broadband and a PC, like NBC, ABC, FOX and IPTV, Android TV Box, browse internet on Smart TV. If use this wireless mini combo, you can sit in comfortable chair and select viewing pleasures without walking to computer to change channels or scroll through options.

Introduction

Product overview



Touchpad

This touchpad support the function of the mouse scroll wheel. When you press the Fn button and your fingers touch anywhere in the sliding region, it simulate mouse scroll wheel function. You can adjust touchpad sensitivity to achieving more comfortable using pressing Fn+Spacebar keys simultaneously. Touchpad have 3 DPI levels.

Connecting the receiver

Slide the receiver out from the side of keyboard, and insert to the devices with a standard USB interface. Once connected, slide the power switch to the "ON" position located on the left side of the unit to establish the connection.

Auto sleep and wake feature

The keyboard also features an auto sleep and auto wake mode. If there is a long period of inactivity, the keyboard will automatically go into a sleep mode. During the sleep mode, the user can wake the unit up by pressing any key. The 2.4 GHz receiver and keyboard's RF indicator will continue to flash and will not power down.

Switching off the keyboard after use

After finishing using the keyboard, push the switch to the off position. This turns off the keyboard power. The USB receiver should be plugged out from the PC and then inserted back in the keyboard so it is being kept safely.

Charging the battery

The device have replaceable lithium-ion battery, please use only approved data lines and chargers.

Note: Fully charge the unit before operating for the first time. This device can be used when charging, but will extend the charging time;

When the battery is low, the low-voltage light will flash to warn the user. The unit will automatically turn off if the battery has been depleted.

Appendix

Technical parameters

Specification

- Measurements (LxWxH): 146.8x97.5x19 mm
- Weight (grams): 110g
- Frequency range: 2.403 ~ 2.480GHZ
- Operational Range: up to 10 meters
- Transmit power: +5db Max.
- Operation voltage: 3.3V
- Charge Voltage: 4.4V ~ 5.25V
- Operation current: < 50mA
- Charging current: < 300mA
- Sleep current: < 1mA

System requirements

- Computer operated with Windows 2000/XP/Vista/7/8, Linux
- Android OS 1.6 or above.
- Mac OS
- Windows CE
- Smart TV/Google TV with USB HID devices

support

Maintenance:

- Do not attempt to disassemble the device or replace rechargeable battery. Doing so will void the warranty.
- The battery will discharge if stored for a long period of time without usage.
- Use the specified charger. Disconnect the device after the battery has been fully charged. Overcharging the battery will shorten the life span of the battery.
- Do not expose the device in extreme heat or cold. Extreme temperatures will cause the life span of the battery to shorten.
- Use only a damp cloth with mild soap to clean the device. Solvents and other cleaning agents may cause damage to the device.

Warning:

- While finished charging, pull out the charge cable.
- Never try to open or repair this product yourself.
- Keep this device away from fluids, such as water.

Troubleshooting:

Below are some basic troubleshooting scenarios for the device. Please contact support from the place of purchase if you are unable to resolve any issues with the device.

Problem	Possible issue	Solution
Unit does not respond.	<ol style="list-style-type: none"> 1. Low battery power. 2. Unit is not turned on. 	<ol style="list-style-type: none"> 1. Charge the device for at least 15 minutes. 2. Check if the switch selected to the "ON" position.
Keyboard cannot establish a connection to the receiver.	<ol style="list-style-type: none"> 1. The receiver may not be inserted correctly. 2. Possible wireless interference with another device. 	<ol style="list-style-type: none"> 1. Disconnect and reconnect the receiver to the USB port. 2. Change the channel of the device by pressing and holding the Fn+ F1 key for 10 seconds and let the unit reconnect.
The mouse pointer moves erratically and/or unresponsive.	<ol style="list-style-type: none"> 1. Device may not be within optimal range of the receiver 2. Dust or oil on the touchpad. 	<ol style="list-style-type: none"> 1. Bring the unit closer to the receiver. 2. Clean the touchpad with a damp cloth.
The unit does not charge.	<ol style="list-style-type: none"> 1. Defective battery. 2. Check connections. 	<ol style="list-style-type: none"> 1. Contact your local dealer for replacements. 2. Verify if the device is securely connected to the charger.

Disposal



Always dispose of the used appliance at a recycling centre.
Do not dispose of the used appliance with the household waste.

Notes:

Since devices using 2.4G technology communicate using radio waves, your device and the other devices do not need to be in direct line-of-sight. The connection can be subject to interference from obstructions, such as walls or other electronic devices

In line with the policy of continued development, the manufacturer reserves the right to amend specifications without prior notification. The illustrations in the user manual are for reference only. Please operate according to the real design.