



MYX KRONOZ 

SMARTWATCH

DESIGNED IN SWITZERLAND

ZeCircle

ENGLISH

CHARGING	05	SLEEP	11
PAIRING	06	GOALS	12
WEARING	08	REMINDERS	12
DISPLAY	09	NOTIFICATIONS	13
ACTIVITY	10	TECH SPECS	14

OVERVIEW

OLED
DISPLAY

TOUCH
ZONE




CHARGING
TERMINALS



To interact with ZeCircle touchscreen, tap on the touch-sensitive area below the display section. ZeCircle touchscreen only respond to tap gestures in this specific touch-sensitive area. Other type of gestures like sliding, swiping, or pressing will not be detected. ZeCircle screen turns off when not in use. Single tap the touch area to wake the device. To ensure ZeCircle is responding accurately to your taps, we recommend using your fingertip and not your nail.

1. CHARGING

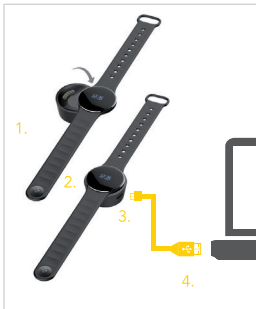

Charge ZeCircle for two hours before your first use.

1. Put ZeCircle on the magnetic charging dock
2. Make sure the 5 pins on the charging dock fit correctly onto the charging terminals on the back of ZeCircle
3. Plug the small end of the USB cable provided into the charging's dock USB port
4. Plug the big end of the USB cable into a power source
5. A battery indicator will fill to indicate charging is in progress. Once ZeCircle is charged, the battery indicator will be full



A full charge takes 1:30 hour. When the battery level gets low, a battery indicator will appear.

2. PAIRING

The first time you use ZeCircle, a **SET UP** message will prompt you to set up your ZeCircle using a mobile device or a computer.

GET ZeCircle APP

To set up your ZeCircle using your mobile device, you first need to get ZeCircle App. Search for **ZeCircle** App in the App store, Google Play or Windows Phone store, download and install the App on your mobile device.



Available on the
App Store



ANDROID APP ON

Google play



**Windows
Phone**

System Requirements

iOs

iOS 7+ devices with Bluetooth 4.0 BLE
iPhone 4s, 5, 5c, 5s, 6, 6 Plus, iPad (3rd, 4th and
5th gen) iPad Mini, iPod touch (5th gen)



Android

Select Android 4.3 +
devices that support
Bluetooth 4.0 BLE

Windows Phone

Select Windows
Phone 8.1 that support
Bluetooth 4.0 BLE

Visit www.mykronoz.com to get the latest compatibility list

1. Enable Bluetooth on your mobile device
2. Open ZeCircle App on your mobile device. **Sign up** if you are a new member or **Log in** with your existing account. After entering your personal information, tap **Set up**
3. Make sure ZeCircle is nearby and select ZeCircle in the list of devices
4. You will receive a pairing request on your mobile device. Press **Pair** to accept it
5. Then, a pairing request will appear on your ZeCircle display
Tap on your ZeCircle to accept the pairing 
6. When ZeCircle is successfully paired, you will be notified on ZeCircle and on your mobile device's screen 


■ You can also set up your ZeCircle using our Mac or PC software available on MyKronoz website: <http://www.mykronoz.com/support/>

■ *System requirements:* Windows 7,8, XP - Mac OS X 10.8 and above

i

If pairing fails, repeat the same steps. Pairing is a one-time process. If you want to pair ZeCircle with another account, you first need to unpair it from the current one. Open ZeCircle App, go to Settings > Connect ZeCircle > Unpair ZeCircle. Tap Connect ZeCircle to pair a new device

3. WEARING

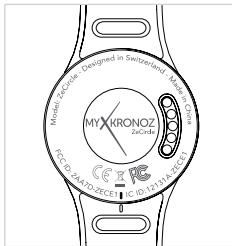


ZeCircle is adjustable to fit different wrist sizes.

1. Pop ZeCircle unit into the wristband
2. Locate the vertical marking lines on the back of ZeCircle unit and on its wristband
3. Make sure the vertical marking lines are aligned with each other
4. Place ZeCircle around your wrist and put the clasp pin inside the hole
5. Press a few times to ensure the pin is fully inserted and that ZeCircle is securely fastened

i

To get the most accurate data, we recommend wearing ZeCircle on your non-dominant hand and not too loose.


3. DISPLAYS

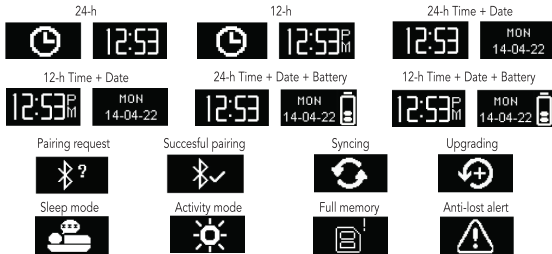

ZeCircle will automatically sync the time and date of your paired mobile device. You can set your preferred time and date format manually in the Settings tab of ZeCircle App. Make sure you keep the device charged to avoid the time being reset

4. ACTIVITY

ZeCircle tracks the number of steps taken, distance travelled and calories burned throughout the day. You can view your daily activity in real-time on ZeCircle display by tapping below the display area.

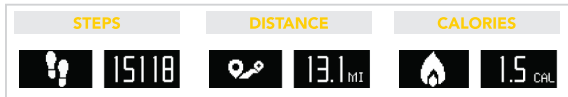

You can also monitor your activity data and history from the **Activity** tab of ZeCircle. On the main activity screen, you can check your performance level against your daily goals. Click on any activity bar to get a detailed graph of your daily, weekly and monthly performance.



ZeCircle shows daily data. The activity tracker resets at midnight. To upload your latest activity data, do not forget to tap the sync icon in the upper right hand corner of ZeCircle App

5. SLEEP

ZeCircle tracks the hours slept and the quality of your sleep (light sleep, deep sleep, awake times)

■ START / EXIT SLEEP MODE

To start sleep mode, open ZeCircle App, tap on the bottom purple sleep bar, click on **Add sleep log > Start Sleep now**

To end sleep mode, open ZeCircle App, tap on the bottom purple sleep bar, click on **Add sleep log > Awake**

■ PRESET SLEEP

Open ZeCircle App > Go to **Settings > Advanced Settings** > Click on **Preset sleep** to enter your desired bed and wake up times. By default, ZeCircle will track your sleep from 11pm until 7am.



To upload your latest sleep data, do not forget to tap the sync icon in the upper right hand corner of ZeCircle App. If you forgot to activate sleep mode, you can manually add sleep logs in ZeCircle App. Open ZeCircle App, click on **Add sleep log > Add sleep**

6. GOALS

Tap the **Goals** tab of ZeCircle App to set daily goals for steps taken, distance travelled, calories burned and hours slept. Click on the sync button in the upper right corner to save your goals. On the Steps screen of your ZeCircle, a progress bar will show how close you are to your daily goal.

Once you hit one of your daily goal, ZeCircle will gently vibrate and display a Goal achieved icon



7. REMINDERS

Tap the **Reminders** tab of ZeCircle App to add daily life reminders. You can set up to 6 daily reminders, and choose the type of reminder and preferred time and day. ZeCircle will gently vibrate and display the corresponding reminder icon to alert you. A single tap on your ZeCircle can dismiss the reminder. If not dismissed, the same alert will repeat after two minutes.

8. NOTIFICATIONS

ZeCircle shows notifications of incoming and missed calls, SMS, email, social media activity, calendar events and anti-lost alert*. Open ZeCircle App, tap **Settings** > **Notifications** to select the notifications you want to receive onto your ZeCircle. If you wish to disable certain notifications, swipe the selection button to the left. A single tap on your ZeCircle can dismiss the notification. If not dismissed, the notification will reappear next time you wake up the screen.

Setting up notifications for iOS users:

- Go to "Settings" of your iOS device
- Tap "Notification Center"
- Select which type of notifications you wish to receive on ZeCircle
- Enable "Show in Notification Center" to receive the notification on ZeCircle



Caller ID supports latin character only. For more languages support, please contact support@mykronoz.com. *Windows Phones may not support those features, please contact support@mykronoz.com for more information.

9. TECH SPECS

Size & Circumference	254 x 34 x 10 mm
	Min:142mm
	Max: 195 mm
Weight	20 g
Bluetooth	4.0 BLE
Bluetooth operating range	Up to 5 meters
Battery type	55 mAh
Battery life	Up to 5 days
Charging time	2 hours
Memory	5 days of activity
Display	Touchscreen OLED 64*32 pixels
Sensor	3-axis accelerometer
Operating temperature	-20°C to +40°C
Water resistance	IP67
International warranty	1 year