


Robustel GoRugged R3000 Quick Guide

Chapter1. Interface Introduction

1.1 LED Indicators

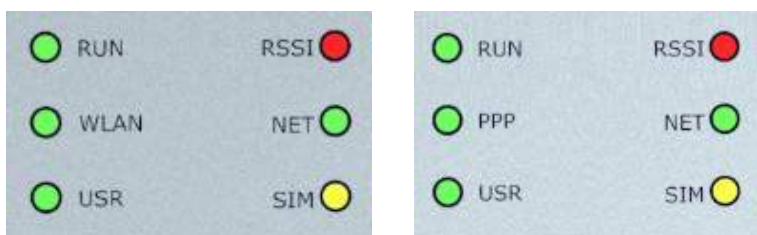

After inserting the SIM card into the router and power on, the LED indicators' status should be as follow when work normally:

Name	Status
RUN	Blinking
PPP	PPP connection is up: On PPP connection is down: Off
RSSI	At least 2 bars
SIM	On


Note: Please refer to *Robustel GoRugged R3000 User Guide* to get more details about all the LED indicators.

1.2 Reset Button



Function	Operation
Reboot	Push the button for 5 seconds under working status.
Restore to factory default setting	Push the button for 60 seconds once you power on the router until all the three LEDs at the left side (RUN, PPP, USR) blink at the same time for 5 times.

1.3 PIN assignment

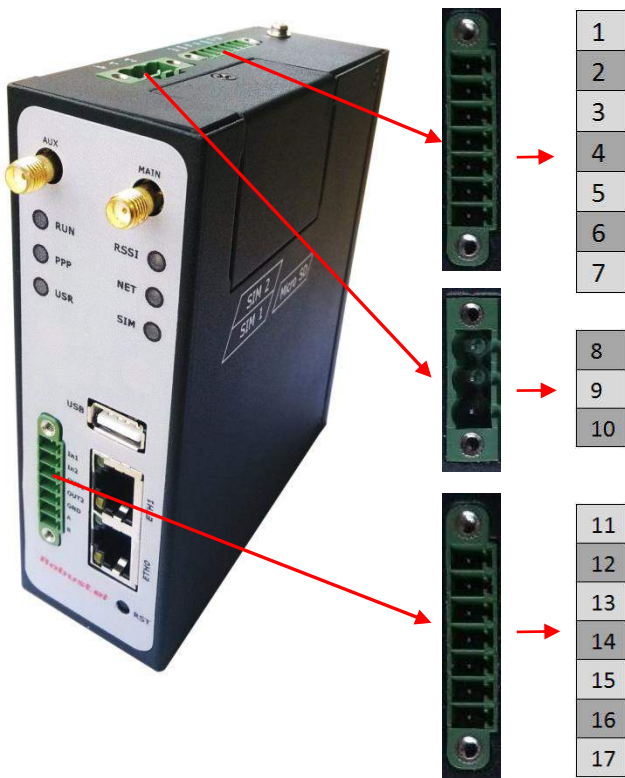

PIN	Debug	RS232	Power	Digital I/O	RS485
1	RXD				
2	TXD				
3	GND	GND			
4		TXD			
5		RXD			
6		RTS			
7		CTS			
8			Positive		
9			Negative		
10			GND		
11				Input 1	
12				Input 2	
13				Output 1	
14				Output 2	
15				GND	
16					Data+(A)
17					Data- (B)

Note: The power supply range is 9 to 60VDC.

1.4 Ethernet ports



Each Ethernet port has two LED indicators (please check the following picture). The green one is **Speed indicator** and the yellow one is **Link indicator**. There are three status of each indicator. Please refer to the form below.

Indicator	Status	Description
Link Indicator	Off	10 Mbps mode.
	On	100 Mbps mode.
Link Indicator	Off	Connection is down.
	On	Connection is up.
	Blink	Data is being transmitted



2.3 Power On and Connect with PC



Chapter3. Initial Configuration

The router can be configured through your web browser. A web browser is included as a standard application in the following operating systems: Linux, Mac OS, Windows 98/NT/2000/XP/Me/Vista/7/8, etc. The product provides an easy and user-friendly interface for configuration.

There are various ways to connect the router, either through an external repeater/hub or connect directly to your PC. However, make sure that your PC has an Ethernet interface properly installed prior to connecting the router.


You must configure your PC to obtain an IP address through a DHCP server or a fixed IP address that must be in the same subnet as the router. The best and easiest way is to configure the PC to get an IP address automatically from the router using DHCP. If you encounter any problems accessing the router web interface it is advisable to uninstall your firewall program on your PC, as these tend to cause problems accessing the IP address of the router.

3.1 Configure PC in Windows


1. Go to Start / Control Panel (in Classic View). In the Control Panel, double-click Network Connections.
2. Double-click Local Area Connection.




3. In the Local Area Connection Status window, click Properties.

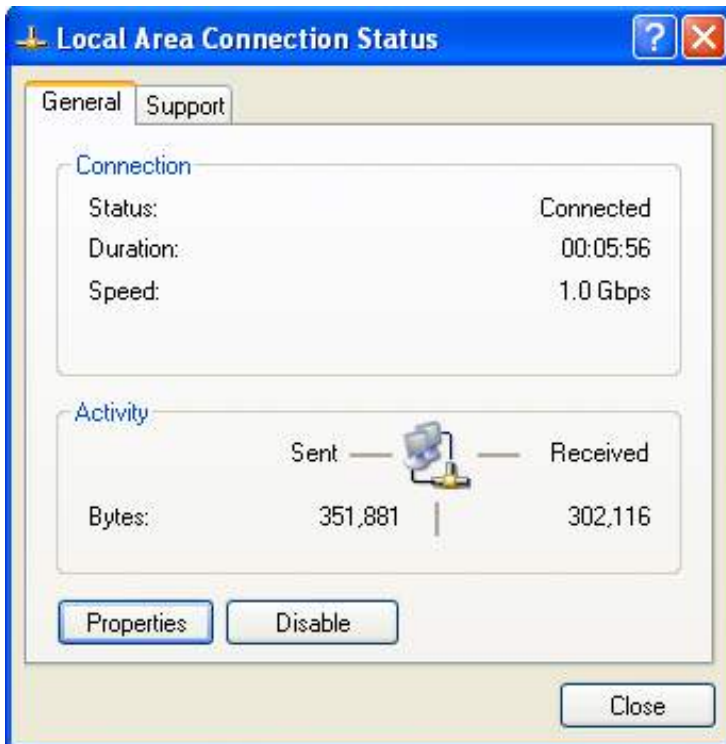

4. Select Internet Protocol (TCP/IP) and click Properties.

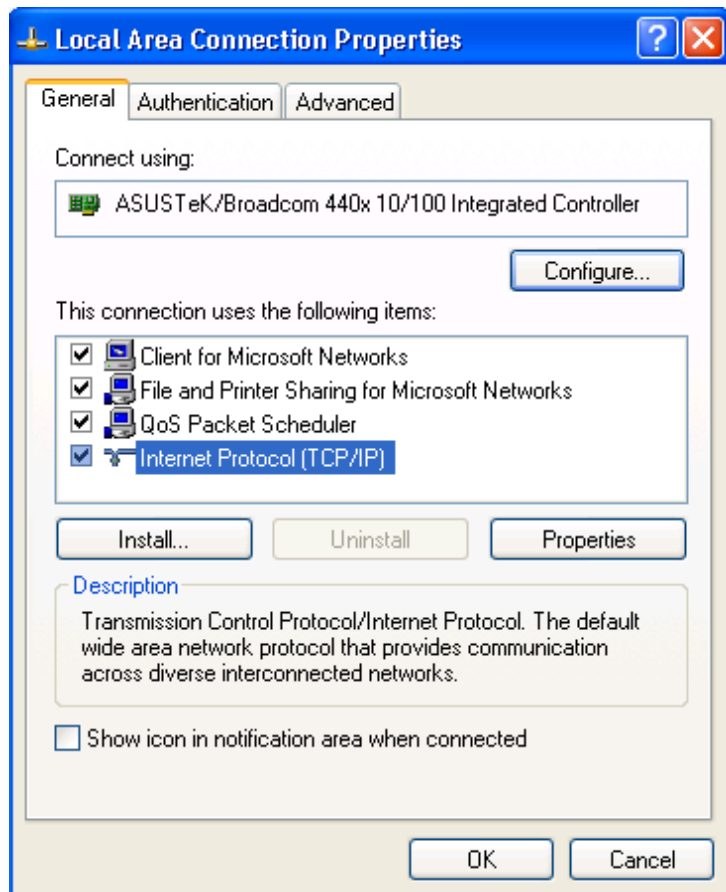


5. Select the Obtain an IP address automatically and Obtain DNS server address automatically radio buttons.

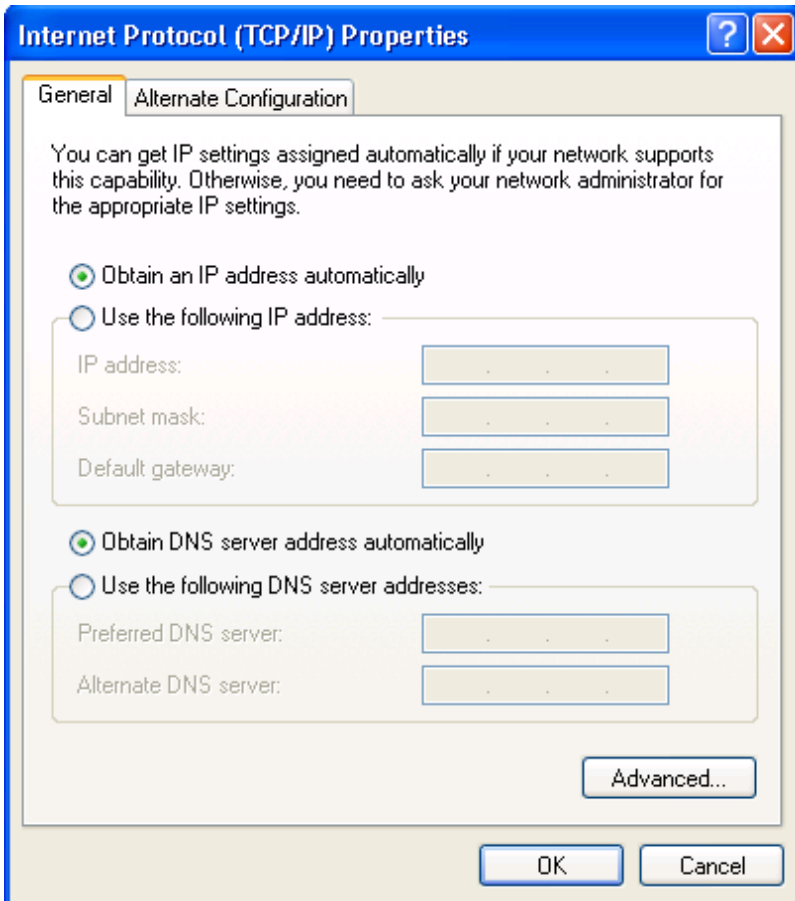

6. Click OK to finish the configuration.

3.2 Connect Router with Internet

1. Open IE browser, input the default IP address of R3000 `http://192.168.0.1` -> Input "username" (default: admin) and the "password" (default: admin) -> Click "login".

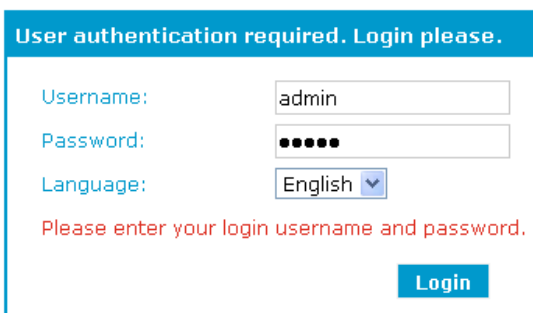


Note: Before configuring your router, you need to know the following default settings.

Item	Description
Username	admin
Password	admin
Eth0	192.168.0.1/255.255.255.0, LAN mode
Eth1	192.168.0.1/255.255.255.0, LAN mode
DHCP Server	Enabled.


2. After succeed to login, go to tab "Cellular WAN" --> enter relevant correct ISP settings, such as APN, Username,

Password, Dialup No. (you can check these information from local ISP) --> click “Apply” -> click “Save” and “Reboot”.

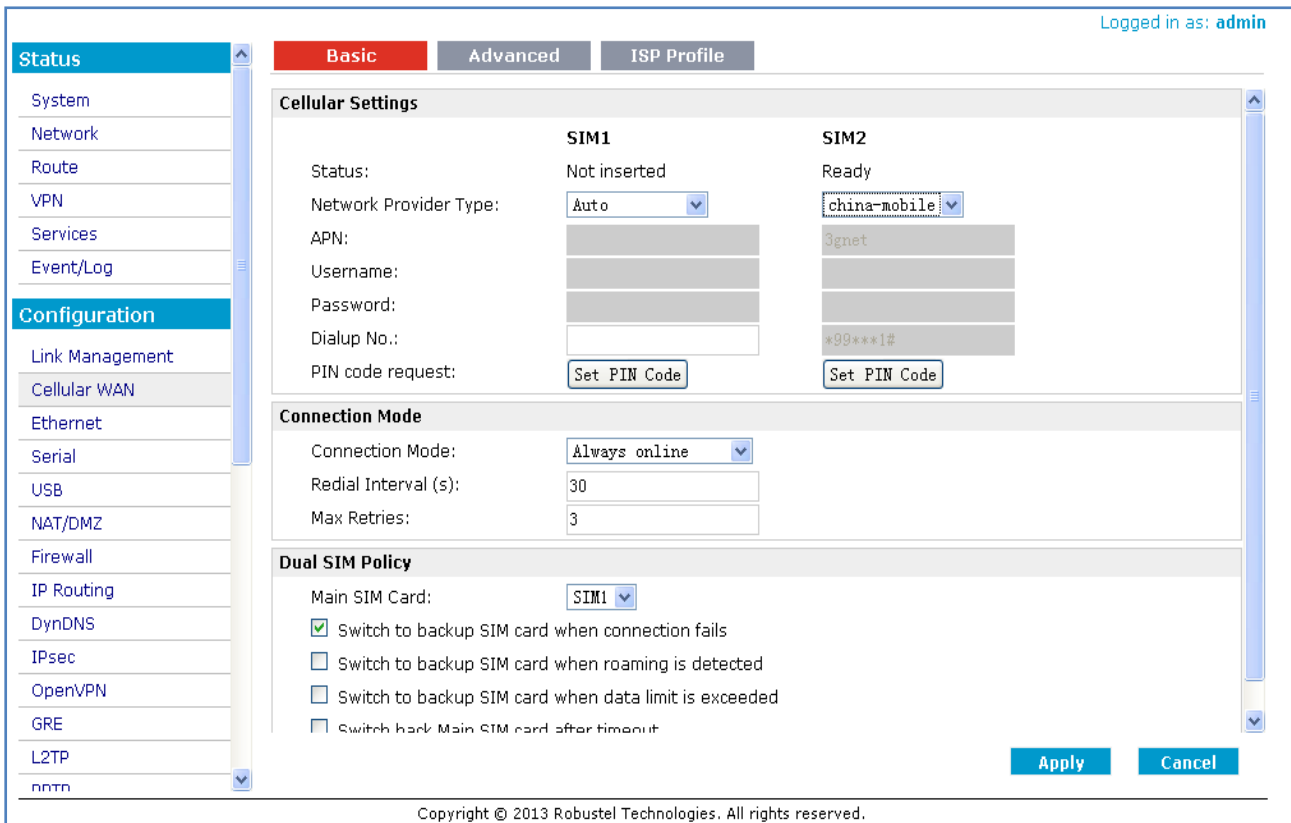

Note: After configure R3000 with new settings, you need to click “Apply” -> “Save” -> “Reboot”.

3. After above correct configuration, R3000 should succeed to establish PPP connection. You can go to tab “Configuration” -> “Status” -> “System” to check whether “PPP” indicator is “ON” (ON means PPP connection established).

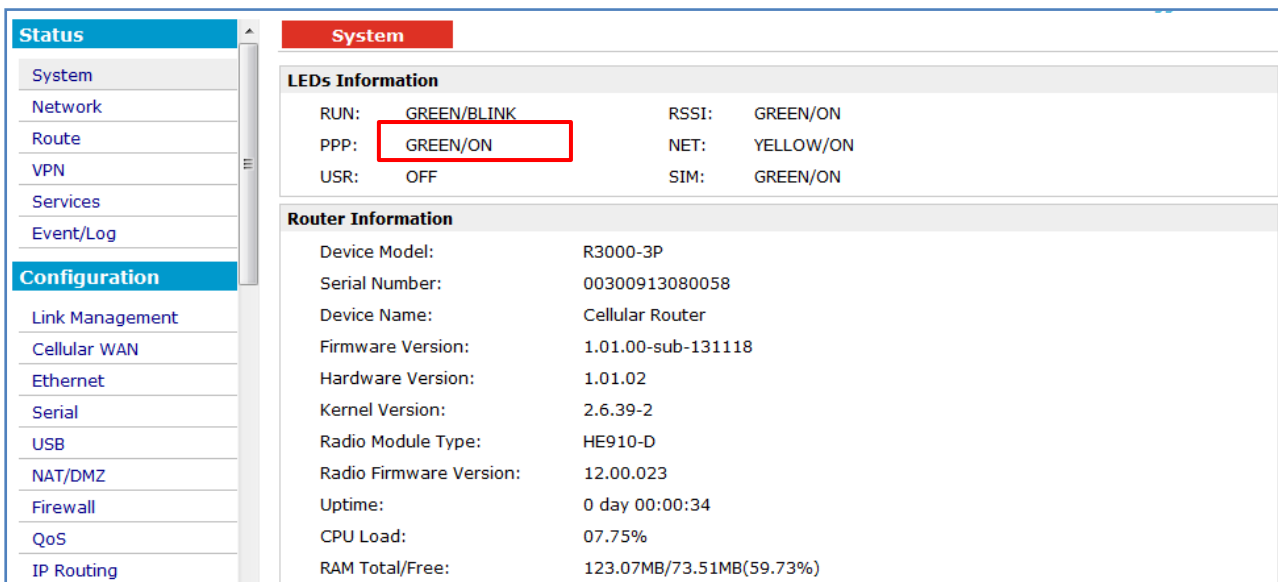

4. R3000 can connect to Internet now.